
OWNER'S MANUAL

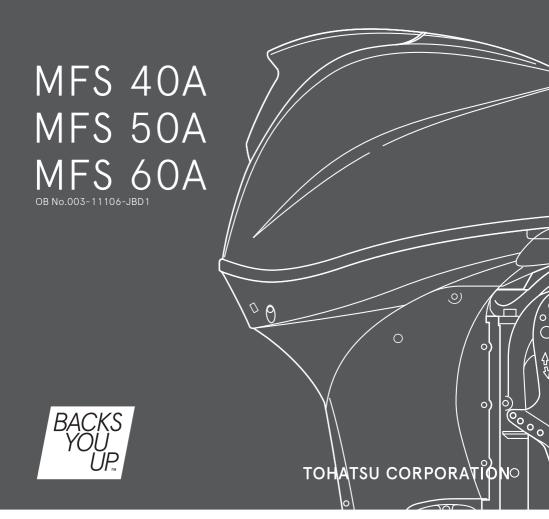

Original instructions

EN





transmitted in any from or by any means without the express written permission of Tohatsu Corporation.

YOUR TOHATSU OUTBOARD MOTOR

ENOM00006-2

To You, Our Customer

Congratulations on your purchase of the TOHATSU outboard motor. You are now the proud owner of an excellent outboard motor that will serve you for many years to come. This owner's manual contains important safety, operational and maintenance information.

The efficiency and longevity of your outboard motor will depend heavily on your operating methods and periodic maintenance. Failure to operate and maintain your outboard motor according to the instruction in this owner's manual may void the limited warranty, as well as reduce the efficiency and reliability of the outboard motor.

Any person operating TOHATSU outboard motor must carefully read and fully understand the entire contents of this manual prior to operation. For safety, follow all safety warnings contained within the owner's manual and the labels applied to your outboard motor. You should keep this owner's manual where accessible while operating your outboard motor. If the outboard motor is resold, make sure the manual is passed on to the next owner. In case you encounter any problems, please contact an authorized TOHATSU service shop or dealer for assistance.

Tohatsu Corporation reserves the right to change, modify, add, or remove a part or whole of the owner's manual without prior notice and incurring any obligations.

We are excited to take a part in your boating adventures and wish for your great and safe boating experience.

TOHATSU CORPORATION

FNOM00113-1

DECLARATION OF CONFORMITY (DoC)

This product conforms to certain portion of the EU-Directives and UK-Regulations. The DoC contains the following information:

- Name and address of the manufacturer, EU-Notified body, EU-Authorised representative and UK-Approved body.
- Applied directives and regulations.
- Reference standards.
- Product description (Model name and serial number).
- Signature of responsible person (name/title/date and place of issue).

ENOM00002-0

OWNER REGISTRATION AND IDENTIFICATION

Upon purchasing this product, be sure that the WARRANTY CARD is correctly and completely filled out and mailed to the addressee noted there on. This WARRANTY CARD identifies you as the legal owner of the product and serves as your warranty registration.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, YOUR OUTBOARD MOTOR WILL NOT BE COVERED BY THE APPLICABLE LIMITED WARRANTY, IF THIS PROCEDURE IS NOT FOLLOWED.

ENOM00003-1

PRE-DELIVERY INSPECTION


Make sure Pre-delivery inspection has been properly done by authorized TOHATSU dealer before operating your outboard motor.


ENOM00005-1

Serial Number

Your outboard motor has a unique serial number. The serial number is identification of outboard motor and is located on the outboard motor as shown in the figures below. The serial number is required for warranty registration, filing a warranty claim as well as making technical inquiries and may be required for other occasions. Therefore, please write down the serial number and date of purchase in the space below.

Serial Number:

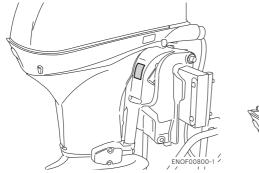

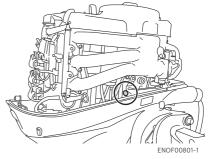

Serial Number:

Date of purchase

ENOM00007-0

NOTICE: DANGER/WARNING/CAUTION/Note

Before installing, operating or otherwise handling your outboard motor, be sure to thoroughly read and understand this Owner's Manual and carefully follow all of the instructions. Of particular importance is information preceded by the words "DANGER," "WARNING," "CAUTION," and "Note." Always pay special attention to such information to ensure safe operation of the outboard motor at all times.

FNOW00001-0

⚠ DANGER

Failure to observe will result in severe personal injury or death, and possibly property damage.

ENOW00002-0

⚠ WARNING

Failure to observe could result in severe personal injury or death, or property damage.

FNOW00003-0

⚠ CAUTION

Failure to observe could result in personal injury or property damage.

ENON00001-0

Note

This instruction provides special information to facilitate the use or maintenance of the outboard motor or to clarify important points.

■ CONTENTS

١.	GENERAL SAFETY INFORMATION	10
2.	SPECIFICATIONS	12
3.	PARTS NAME	15
4.	LABEL LOCATIONS	17
5.	INSTALLATION	21
	1. Mounting the outboard motor on boat	21
	2. Battery installation	
	3. Propeller installation	
	4. TOCS (Tohatsu Onboard Communication System) installation	
6.	PRE-OPERATING PREPARATIONS	
	1. Fuel handling	
	2. Fuel filling	
	3. Engine oil filling	
	4. Break-In	
_	5. Warning system	
7.	ENGINE OPERATION	
	Before starting	
	1. Fuel feeding	
	Starting the engine	
	4. Forward, reverse, and acceleration	
	5. Stopping the engine	
	6. Steering	
	7. Trim angle	
	8. Tilt up and down	. 54
	9. Shallow water operation	57
8.	REMOVING AND CARRYING THE OUTBOARD MOTOR	. 59
	1. Removing the outboard motor	
	2. Carrying the outboard motor	
	3. Trailering	
9.	ADJUSTMENT	
	1. Steering friction	
	2. Throttle grip friction	
	3. Remote control lever friction	
	4. Trim tab adjustment	
10	5. Multi-function tiller handle angle adjustment	
10.		
	1. Daily Inspection	
	3. Off-season storage	
	4. Pre-season check	
	5. Submerged outboard motor	
	6. Cold weather precautions.	
	p p	. 0 /

	7. Striking underwater object	89
	8. Operation with multiple outboard motors	89
11.	TROUBLESHOOTING	90
12.	ACCESSORIES KIT	92
13.	PROPELLER TABLE	93

■ INDEX

	1. GENERAL SAFETY INFORMATION	1
	2. SPECIFICATIONS	2
	3. PARTS NAME	3
	4. LABEL LOCATIONS	4
	5. INSTALLATION	5
	6. PRE-OPERATING PREPARATIONS	6
	7. ENGINE OPERATION	7
	8. REMOVING AND CARRYING THE OUTBOARD MOTOR	8
5) (9. ADJUSTMENT	9
	10. INSPECTION AND MAINTENANCE	10
	11. TROUBLESHOOTING	11
Ĭ	12. ACCESSORIES KIT	12
	13. PROPELLER TABLE	13

■ GENERAL SAFETY INFORMATION

ENOM00009-1

SAFE OPERATION OF BOAT

As the operator/driver of a boat, you are responsible for the safety of those aboard and those in other boat around yours, and for following local boating regulations. You should be thoroughly knowledgeable on how to correctly operate the boat, outboard motor, and accessories. To learn about the correct operation and maintenance of the outboard motor, please read through this manual carefully.

It is very difficult for a person in the water to take evasive action should he or she see a power boat heading in his/her direction, even at a slow speed.

Therefore, when your boat is in the immediate vicinity of people in the water, the outboard motor must be shifted to neutral and shut off.

ENOW00005-0

♠ WARNING

SERIOUS INJURY IS LIKELY IF A PERSON IN THE WATER MAKES CONTACT WITH A MOVING BOAT, GEAR HOUSING, PROPELLER, OR ANY SOLID DEVICE RIGIDLY ATTACHED TO A BOAT OR GEAR HOUSING.

FNOM00247-1

STOP SWITCH LANYARD

The engine can be stopped by pulling out the stop switch lock from the stop switch. The stop switch lanyard is the coiled red cord with the stop switch lock on one end and a metal clip on the other end. With attaching the stop switch lanyard to the operator's body part or operator's personal flotation device (PFD), the engine will stop when the stop switch lanyard is being stretched and pulled out the lock from the switch if the operator accidentally falls overboard or leaves from operator's position. This function may prevent losing control of the boat and minimize or prevent risk of collision with other boats, people and other objects. It is operator's responsibility to use the stop switch lanyard.

ENOW00004-1

⚠ WARNING

Accidental activation of the Stop Switch (such as the tether being pulled out in heavy seas) could cause passengers to lose their balance and even fall overboard, or it could result in loss of power in heavy seas, strong currents, or high winds. Loss of control while mooring is another potential hazard.

To minimize accidental activation of the Stop Switch, the 500 mm (20 inch.) stop switch lanyard is coiled and can extended to a full 1300 mm (51 inch.).

ENOM00800-A

PERSONAL FLOTATION DEVICE

As the operator/driver and passenger of a boat, you are responsible to wear a PFD (Personal Flotation Device) while on the boat.

ENOM00010-1

SERVICING, REPLACEMENT PARTS & LUBRICANTS

We recommend that only an authorized service shop perform service or maintenance on your outboard motor. Be sure to use genuine parts, genuine lubricants, or recommended lubricants. Be aware that the installation and use of parts not approved by Tohatsu Corporation will void warranty and may lead to unsafe operating conditions.

FNOM00011-1

MAINTENANCE

As the owner of the outboard motor, you should be acquainted with correct maintenance procedures following by maintenance section of this manual (See page 65). It is the operator's responsibility to perform all safety inspections, proper lubrication and to follow all maintenance instructions for safe operation. You should take the engine to an authorized dealer or service shop for periodic inspection at the prescribed intervals. Correct periodic maintenance and proper care of outboard motor will reduce the chance of problems, limit overall operating expenses and contribute to longevity of your outboard motor.

Carbon Monoxide Poisoning Hazard

Exhaust gas contains carbon monoxide, a colorless and odorless gas which can be fatal if inhaled for any length of time.

Never start or operate the engine indoors or in any space which is not well ventilated.

Gasoline

Gasoline and its vapors are very flammable and can be explosive. Use extreme care when handling gasoline. You should be thoroughly knowledgeable on how to correctly handle gasoline by reading this manual.

■ SPECIFICATIONS

ENOM00810-A

MODEL FEATURE

Model		F40A		F50A		F60A
Туре		ET	EG	ET	EG	ET
Transom heights	S	•		•		
	L	•	•	•	•	•
Tiller Handle	Tiller Handle		(●)	(●)	(●)	(●)
Remote Control	Remote Control			(●)		(●)
Power Trim & Tilt		•		•		•
Gas-assisted tilt			•		•	

^(•) These models can be purchased with remote rigging kit or multi-function tiller handle.

ENOM00811-A

MODEL NAME EXAMPLE

F 50A ETL

F	50	Α	E	Т	L
Model description	Horse power	Product gen- eration	Starter system	Tilt system	Shaft length
F= Four stroke	-	A and up	E= Electrical start Blank= Manual start	T= Power trim&tilt G= Gas assist Blank= Manual tilt	S= Short 15 in L= Long 20 in UL= Ultra long 25 in

ENOM00013-0

ET, EG

	Model	MFS 40/50/60A			
		ET		EG	
Item		Remote Control	Multi-function tiller handle	Multi-function tiller handle	
Overall Length	mm (in)	783 (30.8)	1434	(56.5)	
Overall Width	mm (in)		404 (15.9)		
Overall Height	mm (in)	n) S: 1257 (49.5) L: 1390 (54.7)		4.7)	
Transom Height	mm (in)	S:	405 (15.9) L: 538 (21	.2)	
NA/-:	S kg (lb)	40/50A: 96.5 (213) 60A: 98 (216)	40/50A: 101.5 (224) 60A: 103.0 (227)	-	
Weight*1	L kg (lb)	40/50A: 98.5 (217) 60A: 100.0 (220)	40/50A: 103.5 (228) 60A: 105.0 (231)	101.0 (222)	
Engine Type			4 stroke		
Number of Cylinder			3		
Piston Displacement cm ³ (cu.in.)		866 (52.8)			
Bore x Stroke mm (in)		70 x 75 (2.75 x 2.95)			
Max. Output kW (PS)		29.4 (40) 36.8 (50) 44 (60)			
Max. Operating Range	min ⁻¹ (rpm)		5000 - 6000		
Idle Speed	min ⁻¹ (rpm)		850		
Exhaust System		Through hub exhaust			
Lubrication System		Wet sump (Trochoid pump)			
Cooling System		Water cooling (with thermostat)			
Starting System		Electric starter motor			
Ignition System		Battery ignition			
Alternator			12V - 25A		
Steering Angle	Degree	70			
Trim Angle*2	Degree	-4 - 8			
Trim Position		4			
Tilt Up Angle*2	Degree	ć	2	56	
Gear Shift			Dog clutch (F-N-R)		
Gear Reduction Ratio		2.08 (27:13)			
Emisson Controul System		MFI (Multiport Fuel Injection)			
Operator Sound Pressure (ICOMIA 39/94 Rev.1) dB (A)		40/50A: 81.8 60A: 84.7			
Hand Vibration Level (ICOMIA 38/94 Rev.1) m/s ²		-	40/50A: 2.	9 60A: 3.5	

Remark: Specifications subject to change without notice.

Tohatsu outbard is power rated in accordance with ISO8665 (propeller shaft output).

^{*1:} With properller

^{*2:} Transom angle is at -12°

Service data

	MFS 40/50/60A			
		ET		EG
Item		Remote Control	Multi-function tiller handle	Multi-function tiller handle
Fuel	Grade	Unleaded Reg	ular Gasoline : R+M/ RON: 91 or higher	2: 87 or higher
Fuel Tank Capacity	L (US gal)		25 (6.60)	
	Grade	API: SH,	SJ, SL SAE: 10W-30	, 10W-40
Engine Oil	L (US/Imp. qt)	2.2 (2.3/1.9) without oil filter replacement		
	£ (00/1111p. qt/	2.4 (2.5/2.1) with oil filter replacement		
Gear Oil	Grade API:GL-5, SAE:80-90)	
deal Oil	mL (US/Imp.oz)	500 (16.9/17.6)		
PTT Fluid		ATF (Automatic Transmission Fluid) Dexron III		
Battery (minimum requirements)			70Ah/20HR, 512CCA	
Spark Plug		NGK IKR6G8		
Spark Plug Gap	mm (in)	0.7-0.8 (0.028-0.031)		
Emission Control System		MFI (Multiport Fuel Injection)		
Intake Valve Clearance mm (in) 40/50A: 0.15-0.25 (0.006-0.010) 60A: 0.2-0.25 (0.008-0.010)				
Exhaust Valve Clearance	aust Valve Clearance mm (in) 40/50A: 0.25-0.35 (0.010-0.0135) 60A: 0.3-0.35 (0.012-0.0135)			


Tightening torque


Engine Oil Drain Bolt	24N·m (17ft·lb, 2.4kgf·m)
Engine Oil Filter	18N ⋅ m (13 ft ⋅ lb, 1.8 kgf ⋅ m)
Gear Oil Plug	4N⋅m (3 ft⋅lb, 0.4 kgf⋅m)
Propeller Nut	35N⋅m (25 ft⋅lb, 3.5 kgf⋅m)
Spark Plug	18N ⋅ m (13 ft ⋅ lb, 1.8 kgf ⋅ m)
PTT Manual Relief Valve	1.8N⋅m (1.4 ft⋅lb, 0.18kgf⋅m)

PARTS NAME

ENOM00820-0

ET, EG (with multi-function tiller handle)

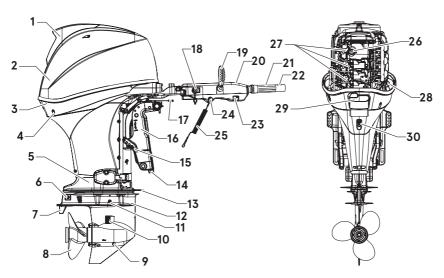

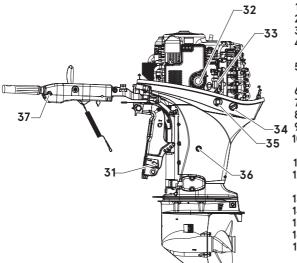


- 1 Tilt Handle2 Top Cowl
- 3 Bottom Cowl
- 4 Cooling Water
- Check Port

 5 Drive Shaft
- Drive Shaft Housing
- 6 Anode
- 7 Trim Tab
- 8 Propeller
- 34 9 Oil Plug (Lower)
 - 10 Cooling Water
 - Inlet
 11 Oil Plug (Upper)
 - 12 Anti-ventilation
 - Plate 13 Splash Plate
 - 14 Anode
 - 15 Thrust Rod
 - 16 Clamp Bracket
 - 17 Steering Friction
 - 18 Main Switch Key
 - 19 Shift Lever

- 20 Tiller Handle
- 21 Throttle Grip
- 22 PTT Switch
- 23 Warning Lamp
- 24 Stop Switch
- 25 Stop Switch Lanyard
- 26 Oil Filler Cap
- 27 Spark Plug
- 28 Oil Level Gauge
- 29 Cowl Hook Lever
- 30 Idle Port
- 31 Manual Valve*
- 70 ...
- 32 Oil Filter
- 33 Fuel Filter
- **34** Flushing Connector Cap
- 35 PTT Switch*
- 36 Oil Drain Bolt
- **37** Throttle Friction Screw
- *: Only for ET model

ENOM00822-0

Remote control box & Fuel tank

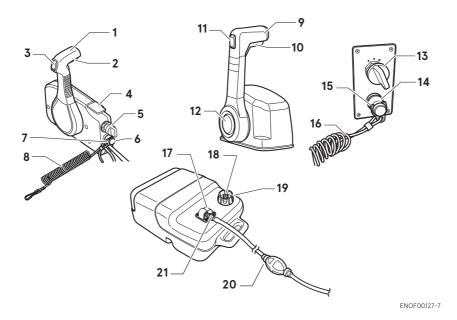

- 1 Control Lever
- 2 Neutral lock arm
- 3 PTT switch
- 4 Free throttle lever
- 5 Main switch
- 6 Stop switch
- 7 Stop switch lock
- 8 Stop switch lanyard
- 9 Control lever
- 10 Neutral lock arm


- 11 PTT switch
- 12 Neutral throttle button
- 13 Main switch
- 14 Stop switch
- 15 Stop switch lock
- 16 Stop switch lanyard
- 17 Fuel gauge
- 18 Air vent screw
- 19 Fuel tank cap
- 20 Primer bulb

21 Fuel connector (Fuel tank side)

■ LABEL LOCATIONS

ENOM00019-A

Warning label locations

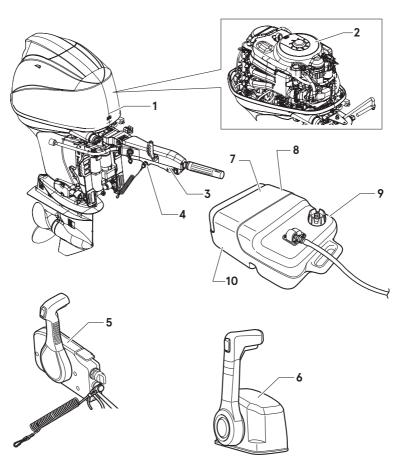

ENOF00127-D3

1. Read owner's manual.



ENOF00120-0

- **2-1.** Warning regarding starting the engine (See page 38).
- 2-2. HOT SURFACE

Can cause burns.

Do not touch when operating or immediately after the engine has stopped.

2-3. HAZARD CAUSED BY ROTATING PARTS

Rotating parts can cause severe injury.

Keep hands, feet, hair, and clothing away from all rotating parts to prevent injury.

2-4. ELECTRICAL SHOCK HAZARD

High voltage can cause severe electrical shock.

Do not touch electrical components such as ignition coil or spark plug cord when starting or while the engine is in operation.

2-5. Fuel filter maintenance. (See page 66, 72, 74, 76)



3UG-72181-0

For tiller handle model

3. Warning lamp (See page 32).



3GF-72198-1

For tiller handle model

4. Stop switch (See page 39 and page 51)



3GF-72200-1

For RC model

5. Warning regarding stop switch lanyard.



ENOF00008-1

For Top mount RC

6. Warning urge to read the owner's manual.



ENOF00120-0

7. Warning regarding gasoline.



ENOF00005-E

8. Warning regarding gasoline (See page 27).



ENOF00005-L

9. Warning regarding gasoline (See page 27).




ENOF00005-M

10. Warning regarding gasoline (See page 27).



ENOM00019-B

CE label locations

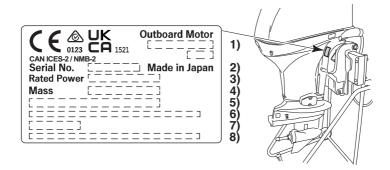

ENOF00894-1

- 1. Model code (Model name)
- 2. Serial No.
- 3. Rated power
- **4.** Dry mass weight (Without propeller, with battery cable)
- 5. Manufacturer name
- 6. Manufacturer address
- 7. Authorised representative
- 8. Authorised representative address

Description of serial number year code

Last two digits of alphabet represent production year as below.

Year Code	BD	BE	BF	BG	ВН
Year of manufacture	2024	2025	2026	2027	2028

■ INSTALLATION

FNOM00024-A

1. Mounting the outboard motor on boat


ENOW00006-10

⚠ WARNING

Gas assist type:

- When taking outboard motor from package or removing outboard motor from the boat, never release the lock lever. If the lock lever is released, it will very easy for the clamp bracket to spring up to the tilting direction because it is not fixed.
- To avoid personal injury or damage of equipment, make sure the allowable lifting capacity of the hoist is at least twice the weight of the outboard motor.
 Do not allow the lift hook or chain from

Do not allow the lift hook or chain from the hoist to come in contact with any part of the outboard motor during lifting.

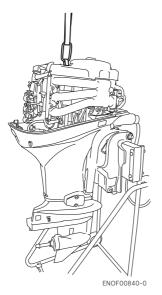

ENOW00006-1

⚠ WARNING

Most boats are rated and certified for their maximum allowable horsepower, as shown on the boat's certification plate. Do not equip your boat with an outboard motor that exceeds this limit. If in doubt, contact your dealer.

Do not operate the outboard motor until it has been securely mounted on the boat in accordance with the instructions below.

ENOW00009-2A

⚠ WARNING

- Mounting the outboard motor without following this manual can lead to unsafe conditions such as poor maneuverability, lack of control or fire.
- Loose clamp screws and/or mounting hardware can lead to the release or displacement of the outboard motor, possibly resulting in loss of control and/or serious personal injury. Be sure that fasteners are tightened to the specified torque. Check the fasteners for tightness before operating your outboard.
- Be sure to use outboard mounting hardware included in the outboard motor package or their equivalents in terms of size, material, quality and strength.


Mounting outboard motor must be performed by trained service person(s) in well-equipped place where lift or hoist can be used.

5

ENOM00025-0

Mounting position

Place the outboard motor in the center of the boat's transom.

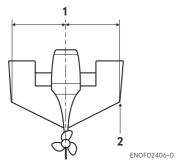


- 1. Center of boat
- 2. Chine

ENOM00026-0

Transom matching

Be sure that the anti ventilation plate of the outboard motor is 10–30 mm (0.4–1.2 in) below the bottom of hull.

If the above condition cannot be met due to the shape of the bottom of your boat, please consult your authorized dealer.

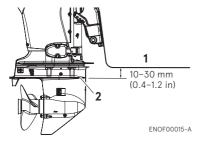

- 1. Bottom of hull
- 2. Anti ventilation plate

FNOW00007-1


A CAUTION

- Before running test, check the boat with maximum loading capacity. Overloading or incorrect weight distribution of the weight may result in boat to lose control, even swamping or capsizing. Make sure that there is enough distance between bottom cowl and water surface to prevent water from entering the engine.
- Make sure to mount the engine in correct position. If outboard motor is mounted incorrectly, water may intrude the engine from openings of the bottom cowl while cruising. Exposing the engine to such condition may result in severe damage to the engine.


ENOM00830-C

Mounting the outboard motor

- 1. Set the outboard motor to appropriate position.
- Secure the clamp brackets to the transom board using bolts, flat washers and nylon locking nuts.

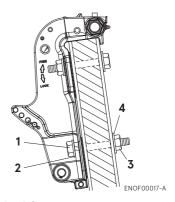

- 1. Bolt (12 × 105)
- 2. Washer (small diameter)
- 3. Nylon locking nut
- 4. Washer (large diameter)

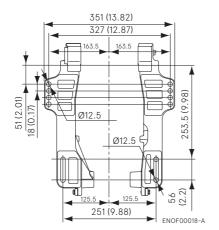

ENOW00008-2

⚠ CAUTION

- Install upper mounting bolts from the boat side. Exposing threaded side of bolts on the boat side can casue personal injury.
- Tighten the bolts securely, otherwise the outboard motor could fall down.

ENON00003-0

Note

- Apply sealing agent, such as silicone sealant between the bolts and the transom board holes before tightening the bolts.
- Do not reuse nylon locking nut.

FNOM00029-A

2. Battery installation

ENOW00012-1

⚠ WARNING

Battery electrolyte contains sulfuric acid and is hazardous, causes a burn if come in contact with your skin, and poisonous if swallowed. Keep battery and electrolyte away from reach of children.

When handling the battery, be sure to:

- Read all warnings shown on the battery case.
- Prevent electrolyte from coming in contact with any part of your body. Contact can cause serious burn or, if come in contact with your eye, loss of sight. Use safety glasses and rubber gloves.

In case you came in contact with battery electrolyte:

- For skin, flush thoroughly with water.
- For eye, flush thoroughly with water, and then seek immediate medical treatment.

In case battery electrolyte is swallowed:

Seek immediate medical treatment.

ENOW00013-B

⚠ WARNING

Battery generates explosive hydrogen gas. Be sure to:

- Charge the battery in a well-ventilated place.
- Place the battery away from any source of fire, sparks and open flames such as burners or welding equipment.
- Do not smoke near the battery when the battery is charging.

ENOW00014-0

A CAUTION

- Make sure that the battery leads do not get stuck between the outboard motor and boat when turning, etc.
- The starter motor may fail to operate if the leads are incorrectly connected.
- Be sure to correctly connect the (+) and (-) leads. If not, the charging system will be damaged.
- Do not disconnect the battery leads from battery while the engine is operating, the electrical parts could be damaged.
- Always use a fully charged battery.

FNOW00015-1

A CAUTION

Do not use a battery that is not recommended. Use of a battery not recommended can lead to poor performance of, and/or damage to the electrical system.

ENON00006-1E


Note

Minimum battery requirements: 12v 70Ah/20HR, 512 Cold Cranking Amps (CCA).

Larger capacity battery is required when it is used under a freezing condition. Recommend connecting only the engine battery cables to the starting battery. Specifications and features of battery vary by manufacturers.

Consult the manufacturer for details.

- * The battery should be purchased separately and is not supplied with the outboard motor.
- Place the battery box in a convenient position and away from possible water spray. Securely fasten both the box and the battery so they do not shake loose.
- Connect the positive lead (+) to the positive terminal (+) of the battery, and then connect the negative lead (-). When disconnecting the battery, always remove the negative lead (-) first. After connecting the positive terminal (+), securely place a cap on it to prevent short circuits.

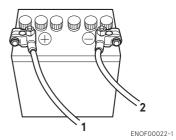

- 1. Battery cord (red)
- 2. Battery cord (black)

ENOM00123-0

3. Propeller installation

ENOW00085-A

⚠ WARNING


Do not begin propeller removal and installation procedure with spark plug caps attached, shift in forward or reverse, main switch at other than "OFF", engine stop switch lock attached to the switch, and starter key attached, or engine could accidentally start leading to serious personal injury.

Disconnect battery cable if possible.

ENOW00085-0

⚠ WARNING

Do not hold propeller with hand(s) when loosening or tightening propeller nut. Put a piece of wood block between propeller blade and anti-ventilation plate to hold propeller.

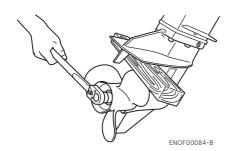

ENOW00086-0

A CAUTION


- Do not install propeller without thrust holder, or propeller boss could be damaged.
- Do not reuse split pin.
- After installing split pin, spread the pin apart to prevent it from falling out which could lead to the propeller coming off during operation.

Propeller must be selected that will allow the engine to reach recommended maximum operating range during cruising.

Wide-open throttle rpm range 5000 – 6000 min⁻¹ (rpm)

Genuine propellers are listed on PROPEL-LER TABLE of this manual (See page 93).


- Remove the split pin, propeller nut and washer.
- 2. Apply water proof grease to the propeller shaft before installing a new propeller.
- Install the thrust holder, propeller stopper, washer and propeller nut onto the shaft.

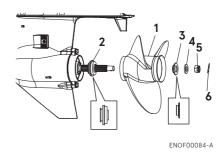

- 1. Propeller
- 2. Thrust holder
- 3. Stopper
- 4. Washer
- NutSplit pin
- 4. Tighten the propeller nut to specified torque with holding the propeller by wood block. And align one of grooves

to propeller shaft hole. Propeller nut torque:

35 N·m (25 ft·lb, 3.5kgf·m)

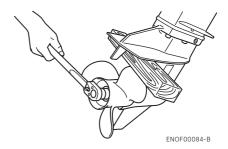


5. Install a new split pin into the nut hole and bend it.

5

ENOM00971-A

4. TOCS (Tohatsu Onboard **Communication System)** installation

TOCS (Tohatsu Onboard Communication System) interface coupler can provide information regarding engine speed, fuel consumption, and various malfunction. Contact authorized Tohatsu dealer for more details.

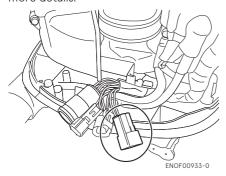

■ PRF-OPFRATING PRFPARATIONS

ENOM00030-A

1. Fuel handling

FNOW000017-0

A CAUTION

Use of improper gasoline can damage your engine. Engine damage resulting from the use of improper gasoline is considered misuse of the engine, and damage caused thereby will not be covered under the limited warranty.

FNOM00031-1

FUEL RATING

Use only major brand unleaded fuel meeting the following specifications:

USA and Canada — having a posted pump Octane Rating of 87 (R+M)/2 minimum. Premium gasoline (92 [R+M]/2 Octane) is also acceptable. Do not use leaded gasoline.

Outside USA and Canada — Use unleaded gasoline with declared octane rating of 91 RON or over. Use of premium gasoline of 98 RON is also allowed.

ENOM00032-1

GASOLINES CONTAINING ETHANOL

The fuel system components on your TOHATSU outboard motor will withstand up to 10% ethyl alcohol (hereinafter referred to as the "ethanol") content in the gasoline. If the gasoline in your area contains ethanol, be aware of certain adverse effects that can occur. Increasing the percentage of ethanol in the fuel can also worsen these adverse effects. Some of these adverse effects are caused by ethanol absorbing moisture in

the air, which leads to separation of the water/ethanol from the gasoline in the fuel tank.

Use of gasoline containing ethanol may accelerate:

- Corrosion of metal parts
- Deterioration of rubber or plastic parts
- Fuel permeation through rubber fuel lines
- Starting and operating difficulties

If the use of gasoline containing ethanol cannot be avoided or presence of ethanol is suspected in the gasoline, it is recommended to use a filter to separate water, and frequently check the fuel system for leaks, mechanical parts for corrosion and abnormal wear.

In case any of such abnormality is found, discontinue the use of such gasoline and contact our dealer immediately.

If the outboard motor will only be used infrequently, please see the remarks on fuel deterioration in the STORAGE chapter (P 85) for additional information.

ENOW00975-0

A CAUTION

When operating an outboard motor with gasoline containing ethanol, storing gasoline in the fuel tank for long periods should be avoided. Storing gasoline for long periods creates unique problems. In cars, ethanol blended fuels are normally consumed before they can absorb enough moisture to cause problems, but boats often sit idle long enough for separation phase to take place. In addition, internal corrosion may take place during storage if ethanol washes away the oil films protecting internal components.

FNOW00018-1

⚠ WARNING

Fuel leakage can cause fire or explosion, potentially leading to severe injury or loss of life. Every part of fuel system should be inspected periodically. Inspect for fuel leak, hardness or any alteration of rubber, expansion and/or corrosion of metals especially after long term storage. In case any indication of fuel leakage or degradation in fuel system is found, replace the part immediately before using the outboard motor.

FNOM00043-B

2. Fuel filling

FNOW00976-0

⚠ WARNING

Do not fill the fuel tank over capacity. Under high temperature conditions, excessive gasoline may evaporate/leak through air vent screw when it is loose or open. Leaking of gasoline is a may lead to a dangerous fire hazard.

ENOW00028-1

⚠ WARNING

Consult an authorized dealer for details on handling gasoline, if necessary.

Gasoline and its vapor are very flammable and can be explosive.

When carrying a fuel tank containing gasoline:

- Close the fuel tank cap and air vent screw of fuel tank cap, or gasoline may evaporate through the air vent screw and may lead to a fire hazard.
- Do not smoke.

When or before refueling:

 Be sure to remove the static electricity charged in your body before refueling.

- The static electricity may ignite the gasoline vapor during refueling.
- Stop the engine, and do not start the engine during refueling.
- Do not smoke.
- Be careful not to overfill fuel tank. Wipe up any spilled gasoline immediately.

When or before cleaning the gasoline tank:

- Dismount fuel tank from the boat.
- Place the fuel tank away from every source of ignition, such as sparks or open flames.
- Do the work outdoors or in a well ventilated area.
- Wipe up gasoline well immediately if spilled.

After cleaning gasoline tank:

- Wipe up gasoline well immediately if spilled.
- If the fuel tank is disassembled for cleaning, reassemble carefully. Incorrect assembly may cause a fuel leak, possibly leading to fire or explosion.
- Dispose aged or contaminated gasoline in accordance with local regulations.

ENOW00029-1

WARNING


When opening fuel tank cap, be sure to follow the procedure described below. Fuel could blast out if the fuel tank cap is opened by using another procedure when internal pressure of fuel tank is raised by heat from sources such as sun light.

ENOW00946-0


A CAUTION

Separate tank must be fixed at appropriate position so that well ventilated and tank does not move or fall down while operating.

 Fully open the air vent screw on the fuel tank cap and release internal pressure.

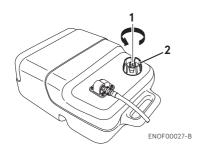

- 1. Air vent screw
- 2. Fuel tank cap
- 2. Open the fuel tank cap slowly.
- 3. Fill the fuel carefully not to over flow.

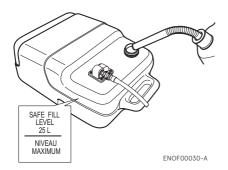

4. After filling the tank, close the fuel tank cap.

FNOM00037-A

3. Engine oil filling

ENOW00022-2


A CAUTION

The engine oil is drained for shipping at the factory. Be sure to fill the engine oil to the proper level before starting the engine.

FNOW00092-1

A CAUTION

- Do not overfill engine oil, or engine oil could leak and/or engine could be damaged. If engine oil level is over upper limit marks of oil level gauge, drain oil to level lower than upper limit.
- Be sure that outboard motor is upright when checking or changing oil.
- Stop the engine immediately if low oil pressure warning lamp or oil leak is found, or engine could be severely damaged. Consult your dealer.
- Wipe off engine oil well immediately if spilled and dispose of it in accordance with local fire prevention and environment protection regulations.
- 1. Place the engine in a vertical position.
- 2. Remove the top cowl and the oil filler cap.
- Fill the engine through filler port with recommended oil to between upper limit and lower limit shown on the dipstick.
- 4. Tighten the oil filler cap.

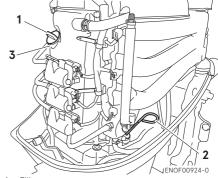

- 1. Filler cap
- 2. Dipstick
- 3. Filler port



- 1. Upper limit
- 2. Lower limit

 
Engine oil recommendation

Use only high quality 4-stroke outboard motor oil to insure performance and prolonged engine life.

SAE: 10W-30 or 10W-40

API: SH, SJ or SL

Engine oil viscosity must be selected from the following chart according to the average temperatures in your area.



Engine oil volume

Approximately 2.2L (2.3/1.9 US/Imp. qt)

ENOW0002A-A

A CAUTION

Use of engine oils that do not meet these requirements will result in reduced engine life, and other engine problems.

FNOM00033-A

4. Break-In

Your new outboard motor and lower unit require break-in for the moving components according to the conditions described in the following time table.

Please refer to ENGINE OPERATION section (See page 37) to learn how to correctly start and operate the outboard motor.

ENOW00024-1

⚠ DANGER

Do not operate the outboard motor in closed area or area with not enough ventila-

Exhaust gas emitted by the outboard motor contains carbon monoxide that may cause dizziness, nausea, other health problem or even death if inhaled continuously.

- During operation of the outboard motor:Keep peripheral area well ventilated.
- Always stay on the windward side of emission.

FNOW00023-1

⚠ CAUTION

Operating the outboard motor without break-in can shorten life.

If any abnormality is experienced during the break-in:

- Discontinue the operation immediately.
- Have the dealer check the product and take proper action(s) if necessary.

ENON00008-2

Note

- During Break-in, run the outboard motor at varied RPM less than specified engine speed. Not following the procedure may result in problems and may shorten the product life.
- Break-in must be conducted under load in the water in-gear with propeller installed.

	1-10 min	10 min - 2 hrs	2-3 hrs	3-10 hrs	After 10 hrs
Throttle Position	ldle	Less than 1/2 throttle	Less than 3/4 throttle	3/4 throttle	Full throttle available
Speed		Approx. 3000 min ⁻¹ (rpm) max	Full throttle run allowed for 1 min every 10 min	Approx. 4000 min ⁻¹ (rpm). Full throttle run allowed for 2 min every 10 min	

ENOM00039-0

5. Warning system

If outboard motor encounters an abnormal condition of fault, the warning buzzer will emit a continuous beep or intermittent short beeps and the warning lamp (LED) will synchronize with the buzzer and engine speed will be limited (engine will not be stopped).

See next page for conditions which will lead to an abnormal condition or fault.

ENOM00040-A

Location of warning buzzer and lamp

■ Warning buzzer

RC model: Located inside the remote control.

Tiller handle model: Located in the tiller handle.

■ Warning lamp (LED)


RC model: Located in the tachometer.

Tiller handle model: Located on the tiller handle

ENON00009-A


Note

Warning lamp for optional tachometer will synchronize with the warning lamp for engine side.

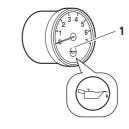

ENOF00851-A

1. Warning lamp

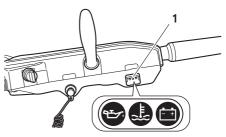

ENOF00852-2

1. Warning lamp

ENOM00041-A

Warning indicators, faults and remedy For one warning lamp

V	Varning indicators				
Sound	A lamp	ESG	Description of faults or notice	Remark	Rem- edy
Continu- ous	ON	-	Normal system test when key on	1 second	
Continu- ous	-	High speed ESG	Engine speed exceeds maximum allowable RPM	Approx. 6,200 min ⁻¹ (rpm)	1
Continu- ous	ON	Low speed ESG	Low oil pressure		2
Continu- ous	-	Low speed ESG	Cooling water temp. is high	Over 85°C/185°F	3
Continu- ous	Flashing	Forced ideling	Cooling water temp. is abnormally high	Over 140°C/284°F	3
-	Flashing	Low speed ESG	Malfunction of sensor		4
-	Flashing	-	Malfunction of electrical part	"A lamp" ON 1 sec. and OFF 1 sec.	4
-	Flashing	-	Inform the recommended timing of engine oil replacement (every 100hrs.)	"A lamp" ON 1 sec. and OFF 9 sec.	5
One beep	-	-	Lowest idling speed of variable idling system		
Two beep	-	-	Highest idling speed of variable idling system		

High speed ESG (Electronic Safety Governor)

High speed ESG is a device to prevent over revolution of the engine. If the load to the engine becomes light for some reason, it runs at a higher speed than the usual. In such the case, the buzzer sounds and the ESG is activated not to ignite the spark plug. Therefore, the engine speed varies and is controlled under 6200 min⁻¹ (rpm).

Low speed ESG

Low speed ESG is a device to prevent the engine from getting damage. If the engine has problems regarding cooling water, oil pressure, and sensors, the low speed ESG is activated not to ignite the spark plug, and disable fueling. Therefore, the engine speed varies and is controlled under 3000 min⁻¹ (rpm).

For three warning lamps

Warning indicators							
Sound	1			ESG	Description of faults or notice	Remark	Rem- edy
	A lamp	B lamp	C lamp				
Continu- ous	ON	ON	ON	-	Normal system test when key on	1 second	
Continu- ous	-	-	-	High speed ESG	Engine speed exceeds maximum allowable RPM	Approx. 6,200 min ⁻¹ (rpm)	1
Continu- ous	ON	-	-	Low speed ESG	Low oil pressure		2
Continu- ous	-	Flash- ing	-	Low speed ESG	Cooling water temp. is high	Over 85°C/185°F	3
Continu- ous	Flash- ing	Flash- ing	Flash- ing	Forced ideling	Cooling water temp. is abnormally high	Over 140°C/284°F	3
-	-	-	Flash- ing	-	Battery voltage is low	Engine is stopped under 9V	4
-	Flash- ing	Flash- ing	Flash- ing	Low speed ESG	Malfunction of sensor		4
-	Flash- ing	Flash- ing	Flash- ing	-	Malfunction of electrical part		4
-	Flash- ing	-	-	-	Inform the recommended timing of engine oil replacement (every 100hrs.)	"A lamp" ON 1 sec. and OFF 9 sec.	5
One beep	-	-	-	-	Lowest idling speed of variable idling system		
Two beep	-	-	-	-	Highest idling speed of variable idling system		

High speed ESG (Electronic Safety Governor)

High speed ESG is a device to prevent over revolution of the engine. If the load to the engine becomes light for some reason, it runs at a higher speed than the usual. In such the case, the buzzer sounds and the ESG is activated not to ignite the spark plug. Therefore, the engine speed varies and is controlled under 6200 min⁻¹ (rpm).

Low speed ESG

Low speed ESG is a device to prevent the engine from getting damage. If the engine has problems regarding cooling water, oil pressure, and sensors, the low speed ESG is activated not to ignite the spark plug, and disable fueling. Therefore, the engine speed varies and is controlled under 3000 min⁻¹ (rpm).

ENOM00126-A1

Remedy

- 1. Reduce the speed to less than half open throttle, and move to safe place quickly, and stop the engine.
 - Check the propeller for bent or damage on blades.
 - Consult an authorized dealer if engine shows the same result even after replacing propeller with a new one.
- **2.** Move to safe place quickly, and stop the engine until it cools down.
 - Check the engine oil level, and add engine oil if necessary.
 - Consult your dealer if the engine oil level is too low or too high.
- Move to safe place quickly, and check if cooling water is discharged from the water check port at idle speed and stop the engine.
 - Remove any foreign matter on the gear case and propeller if necessary. Consult an authorized dealer if no discharge of cooling water.
- 4. Consult an authorized dealer.
- **5.** Replace the engine oil (See page 72) and reset the indicator (See page 35).

ENOW00025-A

↑ CAUTION


- Low speed ESG ON: Engine speed will be limited to 2800 min⁻¹ (rpm), however you should not continue to run engine.
- High speed ESG ON: Engine speed will be limited to 6200 min⁻¹ (rpm) and engine will run rough until throttle is reduced.

ENOM00870-0


Engine oil replacement indicator function reset method

As for "Engine oil replacement indicator function", informing the appropriate timing of engine oil replacement by blinking of the lamp, when beyond 100 hours operating.


 Be certain the safety lanyard is installed. Turn the key to the 'on' position and after the 'beep' pull the safety lanyard off.

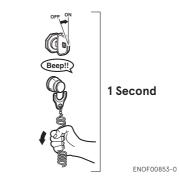

 2. Within 5-10 seconds, Pull the red knob on the safety switch out and release.



 3. Wait 5-10 seconds and pull the red knob out and release.



4. Within 5-10 seconds you will here 3 beeps to inform you that you have successfully reset the system.



5. Turn the ley to the 'off' position and replace the safety lanyard lock.

The engine oil replacement indicators function operates again after 100 hours operation from reset this function.

■ FNGINF OPERATION


ENOM00042-0

Before starting

ENOM00246-0

Oil Level checking

Check the engine oil level before each use. If the oil level is low or too high, the life of the engine will be shortened significantly. (To properly check the engine oil level, follow the instructions, see page 67)

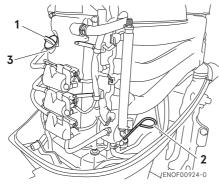

- 1. Oil filler cap
- 2. Dipstick
- 3. Filler port



- 1. Upper limit
- 2. Lower limit

ENOW00027-B

A CAUTION

Before starting engine for the first time after reassembling engine or off-season storage,

disconnect stop switch lock and crank approximately 10 times in order to prime the oil pump.

ENOM01804-0

1. Fuel feeding

ENOW00029-A

⚠ WARNING


When opening fuel tank cap, be sure to follow the procedure described below. Fuel could blast out through the fuel tank cap in case the cap is loosened by using another procedure when internal pressure of fuel tank is raised by heat from sources such as sun light.

ENOW00947-0

A CAUTION


When using a separate tank, be sure that the fuel line is not kinked and is connected securely.

Fully open the air vent screw on the fuel tank cap.

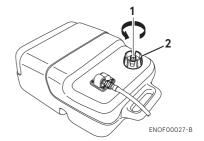


- 1. Air vent screw
- 2. Fuel tank cap
- Open the fuel tank cap slowly and release internal pressure completely.
 After that, close the fuel tank.

 3. Remove the cap from the fuel joint. Connect the fuel hose of the primer bulb and secure with a hose band.



- 1. Joint
- 2. Cap
- 4. Connect the primer bulb to the fuel tank.

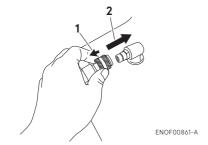

- 1. Pull
- 2. Insert
- 5. Squeeze primer bulb until it becomes stiff to feed fuel to vapor separator. Point the arrow mark upward when priming.



ENOF00862-0

- 1. Engine side
- 2. Fuel tank side

Do not squeeze primer bulb with engine running or when the outboard motor is tilted up to avoid fuel from overflowing.

ENOM00045-K

2. Starting the engine

ENOW00958-1

♠ WARNING

- Do not remove or install the top cowl after the engine has started.
- The exposed rotating engine parts cause serious injury.

ENOW00959-0

∴ CAUTION


The top cowl must be installed while the engine running except in an emergency. If the top cowl is not installed correctly, water splash can damage the engine.

ENOW00036-1A

⚠ CAUTION

When starting the outboard motor in the test tank, make sure that:

- 1. Water level is at least 10 cm (4 in.) above the anti-ventilation plate to avoid overheating of the engine.
- 2. Run at idling only
- 3. Remove the propeller (See page 79)

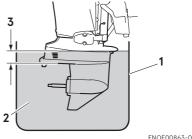

- 3. Over 10 cm (4 in.)



ENOW00036-

CAUTION

Operating outboard motor without cooling water will lead to overheating and damage on the outboard motor severely. In case the cooling water check port is not discharging water, stop the outboard motor immediately, check for any object, debris which may be blocking the cooling water check port. If you are unable to locate the cause, consult an authorized dealer immediately.

ENOW00032-A

⚠ CAUTION

Do not hold turning starter motor more than 5 seconds, or the battery may be consumed, potentially making the engine starting impossible and/or damaging the starter.

If cranking over 5 seconds fails to start engine, return main switch to "ON", and crank engine again after 10 seconds or more. Do not try to crank after engine has started.

This model is provided with start in gear protection.

ENON00010-1

Note


Start-in-gear protection prevents the engine from starting at other than neutral shift. In-gear starting of engine will move the boat immediately, potentially leading to fall down or causing passenger(s) to be thrown overboard.

Tiller handle type

 Be sure to install the stop switch lock to the stop switch, and attach the stop switch lanyard securely to the operator or to the operator's PFD (Personal Flotation Device.)



- 1. Stop switch lock
- 2. Main switch key
- 2. Insert the main switch key.
- 3. Set the shift lever in the Neutral position.

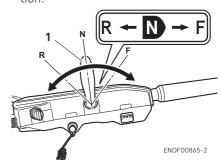


1. Shift lever

ENOW00031-0




If the engine starts in gear, do not use it. Contact an authorized dealer.

4. Set the throttle grip to START position.

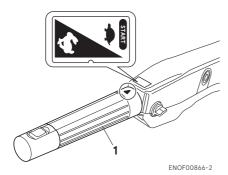

- 1. Throttle grip
- Turn the main switch key to ON position and confirm three warning lamps light up with beep sound and then lights out.
- Turn the main switch key to START position and release the key when the engine has started. The key returns to the original position, automatically.

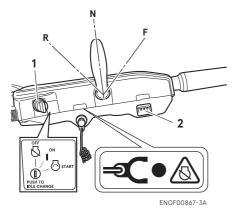

- 1. Main switch key
- 2. Warning lamp

FNOW00032-1




Do not hold turning starter motor more than 5 seconds, or the battery may be consumed, potentially making the engine starting impossible and/or damaging the starter. If cranking over 5 seconds fails to start engine, return main switch to "ON", and crank engine again after 10 seconds or more.

Make sure that water is being discharged from the cooling water check port.




Side mount RC type

 Be sure to install the stop switch lock to the stop switch, and attach the stop switch lanyard securely to the operator or to the operator's PFD (Personal Flotation Device.)

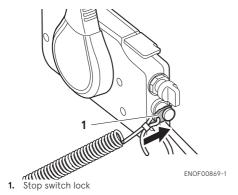


- 2. Insert the main switch key.
- 3. Set the control lever in the Neutral position. Do not raise the free throttle lever when starting the engine.

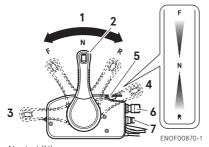


- 1. Neutral (N)
- 2. Control lever
- 3. Fully opened (Forward)
- 4. Fully opened (Reverse)
- 5. Free throttle lever
- 6. Main switch key
- 7. Stop switch

 4. Turn the main switch key to ON position and confirm three warning lamps light up with beep sound and then lights out.



ENOF00851-A

- 1. Warning lamp
- Turn the main switch key to START position and release the key when the engine has started. The key returns to the original position, automatically.

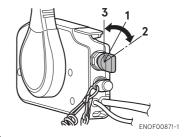


- **1.** ON
- 2. START
- **3.** OFF

ENON00035-1

Note

The free throttle lever cannot be raised when the control lever is in Forward or Reverse.


Make sure that water is being discharged from the cooling water check port.

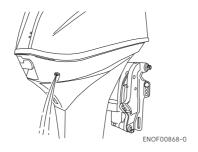

ENOM00974-A


Top mount RC type

 Be sure to install the stop switch lock to the stop switch, and attach the stop switch lanyard securely to the operator or to the operator's PFD (Personal Flotation Device.)

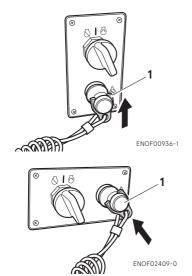


- 1. Stop switch lock
- 2. Insert the main switch key.

3. Set the control lever in the Neutral position. Do not use the Neutral throttle button to open the throttle when starting the engine.

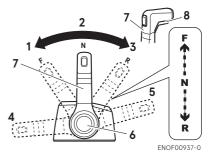



- 1. Forward (F)
- 2. Neutral (N)
- 3. Reverse (R)
- 4. Fully opened (Forward)
- 5. Fully opened (Reverse)
- 6. Neutral throttle button
- 7. Control lever
- 8. Neutral lock arm
- Turn the main switch key to ON position and confirm three warning lamps light up with buzzer sound and then go off.

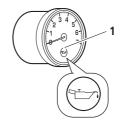

ENOF00851-A

- 1. Warning lamp
- Turn the main switch key to START position and release the key when the engine has started. The key returns to the original position, automatically.

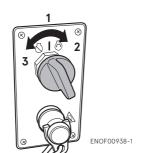

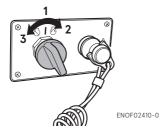


- **1.** ON
- 2. START
- **3.** OFF

ENON00939-0

The neutral throttle button can not be push-in when the control lever shift is in Forward or Reverse.

Make sure that water is being discharged from the cooling water check port.

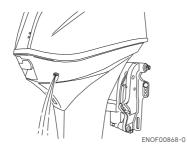

ENOM00042-A

Emergency starting

ENOW00099-1


⚠ WARNING

When the emergency starter rope is used for starting engine;


- Start in gear protection does not work.
 Make sure that shift is in neutral position.
 If the gear is in Forward or Reverse, the boat can start moving immediately and may lead to accident and personal injury.
- Be careful that of your clothes or other items do not to get caught in the rotating parts.
- To prevent accident and injury by rotating parts, do not re-attach flywheel cover or recoil starter and the top cowl after the engine has been started.
- Do not pull starter rope if any bystander is around.
- Attach engine stop switch lanyard to clothing or any part of body such as wrist, arm before starting engine the outboard motor.
- 1. Remove the top cowl.



2. Remove the flywheel cover.

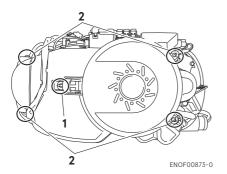


- 1. Bolt
- 2. Rubber grommet
- Insert the knotted end of the starter rope into the notch in the flywheel and wind the rope clockwise around the flywheel several turns.
- Tie a loop in the another end of the emergency starter rope and attach socket wrench, both the loop and the wrench are provided in outboard motor box.

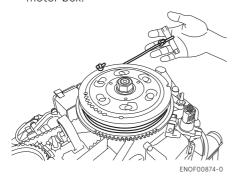

FNOW00860-0



Be sure to keep the harness away from the rotation parts.

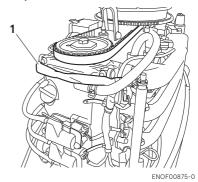

1. Harness

- Be sure to install the stop switch lock to the stop switch, and attach the stop switch lanyard securely to the operator or to the operator's PFD (Personal Flotation Device.)
- 6. Set the control lever in the Neutral position.
- Pull the starter handle slowly until you feel engagement, keep pulling till you feel less resistance. Then pull it quickly.
- 8. Once the outboard motor is started, do not reinstall the recoil starter and top cowl.

ENOM00043-A

3. Warming up the engine

ENOW00932-1



Be sure to check that cooling water is discharged from the cooling water check port during warm up.


7

Warm the engine at low engine speeds for about

3 minutes: above 5°C (41°F)

5 minutes at 2000 min⁻¹ (rpm): blow 5°C (41°F)

This allows the lubricating oil to circulate to all parts of the engine. Operating the engine without warm up shortens the engine's life.

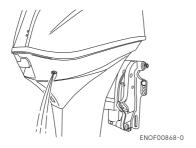

ENOM01826-0

Engine speeds

Idling speed after warming up.

Remark: The idling speed automatically increases depending on the engine temperature. When the engine reaches normal operating temperature, it will return to the specified idling speed.

Clutch in (In gear)	Clutch off (Out of gear)
850 min ⁻¹ (rpm)	850 min ⁻¹ (rpm)

ENOM00972-0


Free throttle lever (Side mount RC type)

ENOW00956-0

↑ CAUTION

- Keep the free throttle lever fully closedposition when start the engine.
- The free throttle lever is inoperative unless the control lever is in neutral.
- Also, the control lever is inoperative unless the free throttle lever is returned to the fully-closed position.

The free throttle lever is for warm-up operation. (Not required for engine starting) With the control lever in neutral, move the free throttle lever upward to open the throttle.

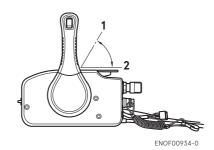

- 1. Fully-open
- 2. Fully-closed

ENOM00973-0

Neutral throttle button (Top mount RC type)

ENOW00957-0

A CAUTION

The control lever does not operate unless the neutral lock arm is pulled.

The neutral throttle button is for warm-up operation. (Not required for engine starting) When the control lever is in neutral, push and hold the neutral throttle button. While holding the button, move the lever forward to throttle up the engine.

When the control lever is returned to the neutral position, the button will reset automatically.



- 1. Neutral throttle button
- 2. Forward

ENOM00880-A

Trolling speed control

If the main switch key is pressed for 1 (one) second during idling or trolling operation, engine speed changes each time the main switch key is pressed.



Engine speed changes as follows. Each time the main switch key is pressed in the above manner, engine speed changes as follows.

Starting

$$\begin{array}{c} 850\;\text{min}^{-1}\,\text{(rpm)} \longrightarrow 750\;\text{min}^{-1}\,\text{(rpm)} \longrightarrow 650\;\text{min}^{-1}\,\text{(rpm)} \\ \uparrow \\ 950\;\text{min}^{-1}\,\text{(rpm)} \longleftarrow 850\;\text{min}^{-1}\,\text{(rpm)} \longleftarrow 750\;\text{min}^{-1}\,\text{(rpm)} \end{array}$$

Buzzer makes one short sound when the engine speed is set to 650 min⁻¹ (rpm), indicating the minimum trolling speed is set.

Buzzer makes two short sound when the engine speed is set to 950 min⁻¹ (rpm),

indicating the maximum trolling speed is set.

Trolling speed control function will reset and trolling speed is set to 850 min⁻¹ (rpm) when the engine speed is increased above 3,000 min⁻¹ (rpm) or after the engine restarted.

If battery voltage is lower than specified value, this function does not operate, and trolling speed is controlled to 850 min⁻¹ (rpm) automatically.

ENOM00046-A

4. Forward, reverse, and acceleration

FNOW00037-1

⚠ WARNING

Before shifting into forward or reverse, make sure that boat is properly moored and outboard motor can be steered fully to the right and left. Make sure that no swimmer(s) is around of the boat.

ENOW00967-0

⚠ WARNING

- Attach the other end of emergency stop switch lanyard to the operator's PFD (Personal Flotation device) or arm and keep it attached during cruising.
- Do not attach the lanyard to a part of clothing that can be torn easily when pulled.
- Arrange the lanyard so that will not be caught by any object when pulled.
- Be careful not to pull the lanyard accidentally during cruising. Unintentional stop of engine can cause loss of control of outboard motor. Rapid loss of engine power can lead to fall down or causing passenger(s) to be thrown overboard.

FNOW00042-1

⚠ WARNING

- Do not shift into Reverse during planing, or control will be lost leading to serious personal injury, boat may swamp, and/or hull may be damaged.
- Do not shift into Reverse during cruising, or control may be lost, fall down or causing passenger(s) to be thrown overboard.
 Leading to serious personal injury, and steering system and/or shifting mechanism may be damaged.

ENOW00861-1

⚠ WARNING

Do not shift at high boat speed, or control may be lost, fall down or causing passenger(s) to be thrown overboard. Leading to serious personal injury.

ENOW00867-1

⚠ WARNING

Sudden acceleration and deceleration may cause passenger(s) to be thrown overboard or fall down.

ENOW00862-1

⚠ CAUTION

Gear and clutch damage may occur if shifting at high engine speed.

Engine must be in the slow idle position before shifting.

ENOW00863-0

A CAUTION

Idle speed may be higher during warming up of engine. If shifted to Forward or Reverse during warming up, it may be difficult to shift back to neutral. In such case, stop engine, shift to neutral, and restart engine to warm up.

ENON00014-0 Note

Frequent shifting to forward or reverse can accelerate wear or degradation of parts. In such case, replace gear oil earlier than the period specified.

ENOW00864-0

A CAUTION

Do not increase engine speed unnecessarily when the shift is in neutral and reverse, or engine damage may occur.


ENOM00890-A

Tiller handle type

ENOW00865-C

⚠ CAUTION

Do not force to shift when the throttle grip is not in the fully closed position, otherwise, steering system and/or shifting mechanism may be damaged. The shift lever is inoperative unless the throttle grip is in the fully closed position. (Multi-function tiller type)

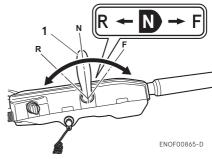

1. Shift lever

Forward


 Turn the throttle grip to reduce engine speed. 2. When the engine reaches trolling (or idling) speed, quickly pull the shift lever to the Forward position.

Reverse

- 1. Turn the throttle grip to reduce engine speed.
- 2. When the engine reaches trolling (or idling) speed, quickly pull the shift lever to the Reverse position.

Acceleration


Open throttle grip gradually.

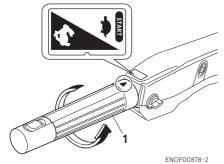

1. Throttle grip

ENOM00900-0

Side mount RC type

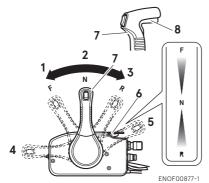

- 1. Forward (F)
- 2. Neutral (N)
- 3. Reverse (R)

- 4. Fully opened (Forward)
- 5. Fully opened (Reverse)
- 6. Free throttle lever
- 7. Control lever
- 8. Neutral lock arm

Forward


- Quickly push the control lever to the Forward (F) position 32°, where the gear is connected, while lifting up on the neutral lock arm located under the control lever grip.
- 2. Further forward motion will open the throttle.

Reverse

- Quickly pull the control lever to the Reverse (R) position at 32°, where the gear will be connected, while lifting up on the neutral lock arm located under the control lever grip.
- 2. Further rearward motion will open the throttle.

Acceleration


Open throttle grip or control lever gradually.

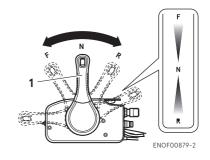

1. Control lever

ENOM00975-0

Top mount RC type

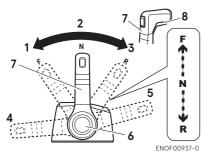

- 1. Forward (F)
- 2. Neutral (N)
- 3. Reverse (R)
- 4. Fully opened (Forward)
- 5. Fully opened (Reverse)
- 6. Neutral throttle button
- 7. Control lever
- 8. Neutral lock arm

Forward

- Quickly push the control lever to the Forward (F) position 35°, where the gear is connected, while lifting up on the neutral lock arm located under the control lever grip.
- 2. Further forward motion will open the throttle.

Reverse

- Quickly pull the control lever to the Reverse (R) position at 35°, where the gear is connected, while lifting up on the neutral lock arm located under the control lever grip.
- 2. Further rearward motion will open the throttle.

Acceleration

Open throttle grip or control lever gradually.

FNOM00049-A

5. Stopping the engine


FNOW00868-1

⚠ WARNING


Be careful not to remove engine stop switch lanyard from engine accidentally while boat is running. Sudden stop of engine can cause loss of steering control, speed, possibly leading the crew(s) and or objects on the boat to be thrown forward due to inertial force.

Tiller handle type

1. Turn the throttle grip to the slow position.

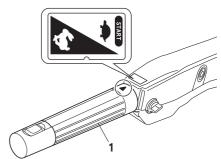



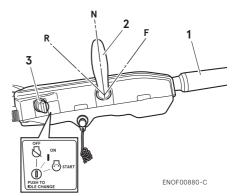


- 1. Throttle grip
- 2. Shift lever
- 3. Main switch key


- 1. Turn the throttle grip to the slow position.
- 2. Put the shift lever in the Neutral position.
 - Run the engine for 2-3 minutes at idling speed for cooling down if it has been running at full speed.
- 3. Turn the main switch key to the OFF position.

Side mount RC type

 Put the control lever in the Neutral position and run the engine for 2-3 minutes at idling speed for cooling down if it has been running at full speed.

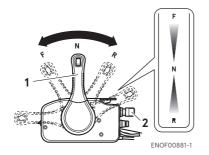

- 1. Control lever
- 2. Main switch key
- 2. Turn the main switch key to the OFF position.

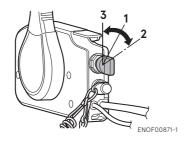

- **1.** ON
- 2. START
- 3. OFF

FNOW00869-2

⚠ WARNING


After stopping the engine:

- Close the air vent screw on the fuel tank cap.
- Disconnect the fuel connector from the fuel tank.
- Disconnect the battery cable, after each use.

ENOM00975-0


Top mount RC type

 Put the control lever in the Neutral position and run the engine for 2-3 minutes at idling speed for cooling down if it has been running at full speed.

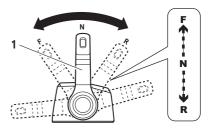

ENOF00939-0

- 1. Control lever
- Turn the main switch key to the OFF position.

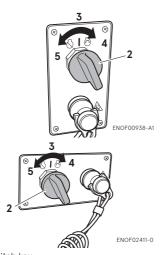

- 2. Main switch key
- **3.** ON
- 4. START
- 5. OFF

ENOW00869-2


WARNING

After stopping the engine:

- Close the air vent screw on the fuel tank
- Disconnect the fuel connector from the fuel tank.
- Disconnect the battery cable, after each use.


Emergency engine stopping

Press the emergency stop switch or remove stop switch lock to stop the engine.

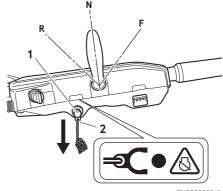



ENOF00883-2

- 1. Stop switch
- 2. Stop switch lock

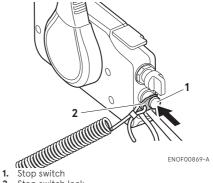

 - 1. Stop switch
- 2. Stop switch lock

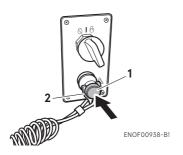



- 1. Stop switch
- 2. Stop switch lock


ENOM00910-1

Spare emergency stop switch lock

A spare emergency stop switch lock is provided in the accessories bag.

Make sure that spare stop switch lock is available before operating outboard motor.

 When used as described, the emergency stop switch clip and emergency stop switch lanyard system stops the engine if the operator is thrown overboard. When an operator falls into water, be sure to use spare emergency stop switch lock.



ENOM00920-0

6. Steering

ENOW00870-1

⚠ WARNING

Sudden steering may cause passenger(s) to be thrown overboard or fall.

Tiller handle type Right turn

Move the tiller handle to the left

Left turn

Move the tiller handle to the right.



Remote control type

Right turn

Turn the steering wheel to the right.

Left turn

Turn the steering wheel to the left.



7

FNOM00050-0

7. Trim angle

FNOW00043-1

WARNING

- Adjust the trim angle when the engine is stopped.
- Do not put hand or finger in between outboard motor body and clamp bracket when adjusting trim angle to prevent possible injury.
- Unsuitable trim position can cause loss of control of boat. When testing a trim position, run the boat slowly initially to see if it can be controlled safely.

ENOW00044-1

⚠ WARNING

Excessive trim up or down may cause unstable boat operation, loss of control that may leads to accident during cruising.


- For manual tilt model, If you feel the trim is improperly positioned, stop the boat and readjust trim angle before continuing to cruise.
- For outboard motor model with PT or PTT switch on the bottom cowl, do not operate the switch during while cruising, or control of boat may be lost.

The trim angle of the outboard motor can be adjusted to suit the transom angle of the hull, and load conditions. Choose an appropriate trim angle that will allow the anti-ventilation plate to run parallel to the water surface during operation.

ENOM00052-0

Proper trim angle

 The position of the thrust rod is correct if the hull is horizontal during operation.



1. Perpendicular to the water surface

ENOM00053-0

Improper trim angle (bow rises too high)

Set the thrust rod lower if the bow of the boat rises above horizontal.




FNOM00054-0

Improper trim angle (bow dips into the water)

Set the thrust rod higher if the bow of the boat is below horizontal.



ENOF00053-0

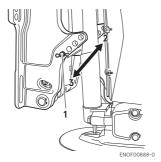


- 1. Thrust rod
- 2. Higher
- 3. Lower

Trim angle adjustment

The transom angle adjustment

- 1. Stop the engine.
- 2. Shift into neutral position.
- 3. Tilt up the outboard motor.
- 4. Lock the tilt stopper
- 5. Remove the snap pin and thrust rod as shown in the picture.

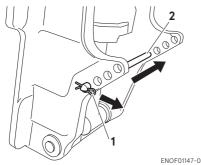

- 1. Snap pin
- 2. Thrust rod
- 6. Reinstall the thrust rod in the desired position securely.
- 7. Put the snap pin back and unlock the tilt stopper.
- 8. Gently tilt down the outboard motor.

ENOM00060-A

8. Tilt up and down

FNOW00055-1

⚠ WARNING

Do not tilt the outboard motor up or down when swimmer(s) and/or passenger(s) are near to prevent them from being caught between outboard motor body and clamp bracket.

ENOW00048-1

⚠ WARNING

When tilting up or down, be careful not to place your hand between the swivel bracket and the clamp bracket.

FNOW00056-A

⚠ WARNING

When tilting up outboard motor with fuel joint for over a few minutes, be sure to disconnect fuel hose, or fuel may leak, potentially catching fire.

ENOW00057-1

A CAUTION

Do not tilt up the outboard motor while engine is operating, or no cooling water may be discharged, leading to engine seizure due to overheating.

ENOW00071-0

CAUTION

Do not use tilt stopper or lever when trailering the boat. Use only for holding the outboard motor in the fully tilted up while the boat is stored.

ENON00921-1

Note

After use, leave the outboard motor upright for a minute to drain the water from inside the engine.

ENOM00065-A

Gas assist type

ENOW00871-0

⚠ WARNING

When taking outboard motor from package or removing outboard motor from the boat, never release the lock lever. If the lock lever is released, it will very easy for the clamp bracket to spring up to the tilting direction because it is not fixed.

FNOW00070-0

⚠ WARNING

Never attempt to disassemble shock absorber of gas assist tilt system. It is dangerous because high pressure gas is included in the shock absorber.

ENOM00066-A


Tilt up

- Move (UP) lock lever to "Free" position.
- 2. Fully tilt up the outboard motor.
- While keeping the outboard motor in full tilt up position, move, (DOWN) lock lever to "Lock" position.
- 4. For safety, set the tilt stopper into the set- up position, although the outboard motor is kept in the tilt up position after the lock lever is moved (DOWN) to "Lock" position.


ENOM00067-A

Tilt down

- Move (UP) lock lever to "Free" position.
- Release the tilt stopper from the setup position while slightly tilting up outboard motor.
- 3. Release outboard motor down to thrust rod.
- Move (DOWN) lock lever to "Lock" position after the outboard motor is completely tilted down.

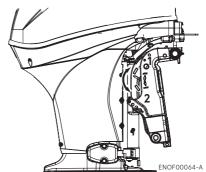

- 1. Free position
- 2. Lock position

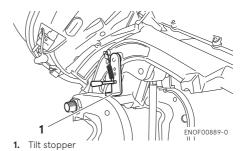

ENOM00069-A

Power Trim & Tilt type


Tilt up

1. Operate the Power Trim & Tilt switch and tilt the outboard motor up.


Lock the tilt with the Tilt stopper after the outboard motor has been tilted up

Tilt down

- Release the tilt stopper from the setup position while slightly tilting up outboard motor.
- Operate the Power Trim & Tilt switch and tilt the outboard motor down until the motor touches to the thrust rod.

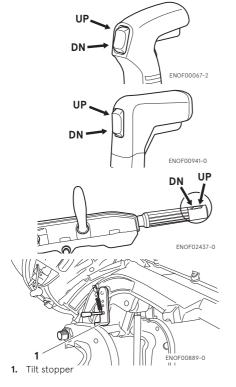

The outboard motor can also be tilted up and down using the switch provided on the bottom cowl.

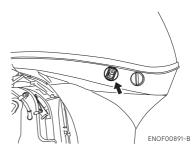

It is possible to tilt up or down whether or not the main switch is "ON" or "OFF".

ENOM00940-1

Manual relief valve

If the battery is dead, and/or the power tilt switch is inoperative open the manual valve completely in the Manual direction. This allows the outboard motor to be tilted manually.

ENOW00872-1


⚠ WARNING

Make sure the manual relief valve is closed before operating the outboard motor. If the manual relief valve is not closed, the outboard motor will be tilted up when shifting in reverse.

ENOW00873-1

⚠ WARNING

Before opening the manual relief valve, make sure nobody is under the outboard motor. If the outboard motor is in the tilted upposition with the manual relief valve loosend, the outboard motor will be tilted down suddenly.

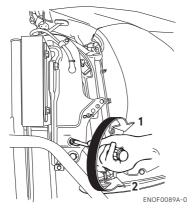

- 1. Power
- 2. Manual

Manual relief valve specified torque:

1.8 N-m (1.4 ft-lb, 0.18 kgf-m)

ENOM00068-A

9. Shallow water operation

ENOW00051-0

⚠ WARNING

During shallow water operation, be careful not to place your hand between the swivel bracket and the clamp bracket. Be sure to tilt the outboard motor down slowly.

ENOW00053-0


A CAUTION

While in shallow water drive position, do not operate the outboard motor in Reverse. Operate the outboard motor at slow speed and keep the cooling water intake submerged.

FNOW00054-14

A CAUTION

Do not over tilt the outboard motor when driving in shallow water, or air may be sucked through water inlet, potentially leading to engine overheating.

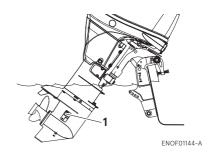


1. Water inlet

ENOM00880-A

Gas assist type

Move (UP) lock lever to "Free" position. Tilt up outboard motor into desired shallow water running. While keeping the outboard motor in the desired shallow water running position, move (DOWN) lock lever "Lock" position.

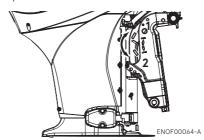

- 1. Free position
- 2. Lock position


2. Return to normal running position Move (UP) lock lever to "Free" position. Outboard motor moves down to thrust rod.

Move (DOWN) lock lever to "Lock" position.

ENOM00069-A

Power Trim & Tilt type

 Operate the Power Trim & Tilt switch and tilt the outboard motor up into desired shallow water running position.

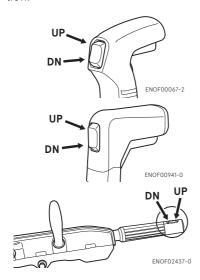

REMOVING AND CARRYING THE OUTBOARD MOTOR

ENOM00070-L

1. Removing the outboard motor

FNOW00006-1B

⚠ WARNING

To avoid personal injury or damage of equipment, make sure the allowable lifting capacity of the hoist is at least twice the weight of the outboard motor.


Do not allow the lift hook or chain from the hoist to come in contact with any part of the outbord motor during lifting.

ENOW00064-1

⚠ CAUTION

Engine may be hot immediately after operation and could cause burns if came in contact. Allow engine to cool down before attempting to carry the outboard.

- 1. Stop the engine.
- 2. Remove the top cowl.
- Disconnect the fuel hose from a fuel tank, the remote control cables and the battery cords from the outboard motor.
- 4. Attach the hoist hooks to the engine hanger.
- Remove the outboard motor from boat and completely drain the water from the gear case.

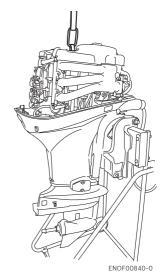

ENOM00071-A

2. Carrying the outboard motor

ENOW00933-1

⚠ WARNING

Be sure to disconnect the fuel hose from a fuel tank except when operating engine. Fuel leakage is a fire or explosion hazard, which can cause serious injury or death.

ENOW00065-1

⚠ WARNING


Close air vent screw on fuel tank before carrying or storing outboard motor and fuel tank, or fuel may leak, potentially catching fire.

ENOW00066-1

A CAUTION


- Do not give a shock to an outboard motor during transportation.
- Do not carry or store outboard motor in any of positions described below.

Otherwise, engine's exterior may be damaged or water may enter the cylinder through the exhaust port and cause engine problems.

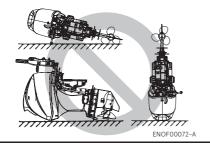


Keep the outboard motor in a vertical position when carrying.

The optional outboard motor stand is recommended for keeping the outboard motor vertical both during transport and storage.

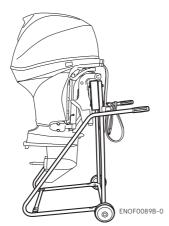

ENON00021-3 Note

 If the outboard motor must be laid down, be sure that fuel is completely drained, then lay the outboard motor with port side down on the cushion as shown in the drawing.



ENOF00072-B

ENOM00072-1A

3. Trailering

ENOW00072-0


⚠ CAUTION

Trailering in the tilted position may cause damage to the outboard motor, boat, etc.

FNOW00073-B

⚠ WARNING

 Be sure to disconnect the fuel hose from a fuel tank except when operating engine. Fuel leakage is a fire or explosion hazard, which can cause serious injury or death.



FNOW00068-0

⚠ WARNING

Close air vent screw of fuel tank and fuel cock before carrying or storing outboard motor and fuel tank, or fuel may leak, potentially catching fire.

ENOW00071-0

A CAUTION


Do not use tilt stopper or lever when trailering the boat. Use only for holding the out-

board motor in the fully tilted up while the boat is stored.

When transporting a boat on a trailer with the outboard motor attached, disconnect the fuel line from the outboard motor beforehand and keep the outboard motor in the vertical or on a transom saver bar.

Tiller handle type

While transporting outboard motor attached to the boat on a trailer, properly tighten the steering friction bolt to prevent the outboard motor from moving (page 62).

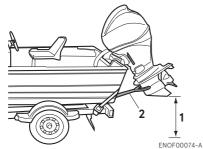

- Ground clearance should be provided sufficiently.
- 2. Transom saver bar

ENOW00067-0



Do not go under outboard motor tilted up even if it is supported by support bar, or accidental fall of outboard motor could lead to severe personal injury.

ADJUSTMENT

ENOM00073-0

1. Steering friction


Tiller handle type

ENOW00074-1

⚠ WARNING

Do not overtighten the steering friction lever, it could result in difficult handling of the outboard motor, resulting in the loss of control causing an accident and could lead to severe injury.

Adjust this lever to achieve the desired steering friction (drag) on the tiller handle. Move lever towards (2) to decrease friction and move lever towards (3) to increase friction.

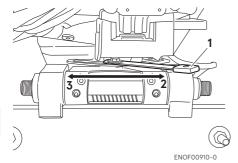

- 1. Steering friction lever
- 2. Decrease
- 3. Increase


ENOM00074-A

2. Throttle grip friction

ENOW00074-1B

⚠ WARNING

Do not overtighten the throttle adjustment screw or it could result in difficult handling of the outboard motor, resulting in the loss of control causing an accident and could lead to severe injury. Friction adjustment of the throttle grip can be made with the throttle adjustment screw.

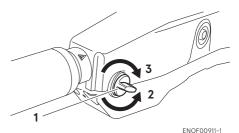

- 1. Throttle friction adjustment screw
- 2. Decrease
- 3. Increase

ENOM00075-1

3. Remote control lever friction


ENOW00074-1C

⚠ WARNING

Do not overtighten the remote control throttle friction adjustment screw or it could result in difficult handling of the outboard motor, resulting in the loss of control causing an accident and could lead to severe injury.

To adjust the friction of the remote control lever, turn the throttle friction adjustment screw on the front of the remote control. Turn clockwise to increase the friction and counter-clockwise to decrease it.

Side mount type

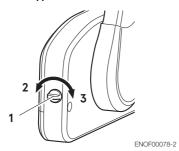

- 1. Throttle friction adjustment screw
- 2. Decrease
- 3. Increase

Top mount type



- 1. Throttle friction adjustment screw
- 2. Lighter
- 3. Heavier

ENOM00076-0

4. Trim tab adjustment

ENOW00076-1

⚠ WARNING

- Be sure that the outboard motor is secured to transom or service stand, or accidental drop or fall of outboard motor could lead to severe personal injury.
- Be sure to lock the outboard motor in the tilt up position, or accidental fall of outboard motor could lead to severe personal injury.
- Do not go under outboard motor in the tilt up position and locked, or accidental fall of outboard motor could lead to severe personal injury.


FNOW00075-1

⚠ WARNING

Inappropriate adjustment of trim tab could cause steering difficulty. After installing or readjusting trim tab, check if steering load is even.

If straight-line cruising can not be achieved, adjust the trim tab located under the anti-ventilation plate.

- If the boat veers toward the left direct the trim tab towards A (left from rear of boat).
- If the boat veers toward the right direct the trim tab towards B (right from rear of boat).

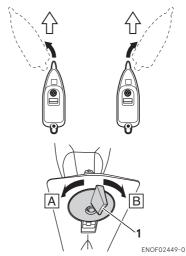

1. Trim tab ENON00022-A

Notes

- After adjustment securely tighten the trim tab fixing bolt.
- Check for looseness of the bolt and the trim tab at regular intervals.


NOM01903-0

5. Multi-function tiller handle angle adjustment

FNOW00985-0


- Do not install or remove spacers on the bracket with engine running.
- Do not install more than 6 spacers [1].

 The angle of the multi-function tiller handle can be adjusted between 0 and 30 degrees by using the spacer kit that comes with the multi-function tiller handle.



ENOF02550-0

- Spacer [1]
- Spacer [2]
- 3. Screw

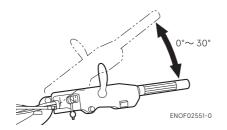

■ Angle of Multi-Function Tiller Handle according to the number of spacers.

Spacer [1] (Qty)	Spacer [2] (Qty)	Angle (approx)
0	0	0°
0	1	9.5°
1	1	14°
2	1	20.5°
3	1	23.5°
4	1	27°
5	1	30°

After adjusting the angle, fully turn the tiller handle to both side and check that there is no problem in operation.

ENON00022-A

Notes

- Tighten the screws securely.
- Periodically make sure that the bolts are not loose.
- The multi-function tiller handle kit includes one spacer [1], one spacer [2] and screws.

10

■ INSPECTION AND MAINTENANCE

ENOM00077-1

Care of your outboard motor

To keep your outboard motor in the best operating condition, it is very important that you perform daily and periodic maintenance as suggested in the maintenance schedules as follows.

FNOW00077-1

⚠ CAUTION

- Your personal safety and that of your passengers depends on how well you maintain your outboard motor. Carefully read all of the inspection and maintenance procedures described in this section.
- The maintenance intervals shown in the checklist apply to an outboard motor in normal use. If you use your outboard motor under severe conditions such as frequent full-throttle operation, frequent operation in brackish water, or for commercial use, maintenance should be performed at shorter intervals. If in doubt, consult your dealer for advice.
- We strongly recommend that you use only genuine replacement parts on your outboard motor. Damage to your outboard motor arising from the use of other than genuine parts is not covered under the warranty.


10

ENOM00079-0

1. Daily Inspection

Perform the following checks before and after use.

 ENOW00078-1



Do not use outboard motor if any abnormality is found during pre-operation check otherwise it could result in severe damage to the motor or severe personal injury.

Item	Points to Check	Remedy	
	· Check the amount of fuel in the tank.	Replenish	
Fuel System	· Check for debris or water in the fuel filters.	Clean or replace if	
ruei system		necessary	
	· Check the rubber hoses for fuel leakage.	Replace if necessary	
	Check for crack, leakage, damage in the fuel tank cap.	Replace if necessary	
Fuel Tank Cap	· Check for crack, damage in the gasket.	Replace if necessary	
	· Check for leakage at full close.	Replace if necessary	
Engine Oil	· Check the oil level.	Fill oil	
	· Check that the main switch functions normally.	Replace if necessary	
	Check that the battery electrolyte level and specific gravity	Replenish or recharge	
	are normal.		
	· Check for loose connections on the battery terminal.	Retighten	
	Check that the stop switch functions normally and make sure	Remedy or replace if	
Electrical	the stop switch lock is secured.	necessary	
Equipment	Check cords for loose connections and damage.	Correct or replace if	
		necessary	
	· Check the spark plugs for dirt, wear and carbon build-up.	Clean or replace if	
		necessary	
	· Check the warning buzzer (one beep) and warning LED lamp	Repair	
	(ON for 1 secs.) when key is ON.	A 12 1	
	Check that clutch engages correctly when operating the shift	Adjust	
Clutch and	lever.	Danie :	
Propeller Sys- tem	Visually Check propeller for bent or damaged blades.	Replace if necessary	
	Check the propeller nut is tightened and the split pin is in correct position.	Tighten or replace	
	Check all the bolts attaching the motor to the boat.	Tighten	
Installation of Motor	Check the thrust rod installation.	Replace if necessary	
Power Trim &	Check the thrust rod installation. Check working of the tilt up and down of the motor.	Repair	
Tilt	Check working of the tilt up and down of the motor.	Nepali	
Cooling Wets	· After starting the outboard motor, make sure that water is	Repair	
Cooling Water	being discharged from the cooling water check port.		
Toolsond	Check that there are tools and spare parts for replacing spark	Order	
Tools and Spares	plugs, the propeller, etc.		
	· Check that you have the spare rope and stop switch lock.	Order	


Item	Points to Check	Remedy		
Steering Devices	Make sure that steering handle and remote control is functioning normally.	Repair		
Other parts	Check if the anode is securely installed. Check the anode for corrosion and deformation.	Repair if necessary Replace		

FNOM00081-D

Oil level checking

If the oil level is low, or too high, the life of the engine will be shortened significantly.

- 1. Place the engine in a vertical position.
- 2. Remove the top cowl.
- 3. Remove the dipstick.
- 4. Wipe oil off the dipstick with a clean cloth.
- 5. Insert the dipstick to the hole completely.
- Remove the dipstick again. Check the oil level on the dipstick. Oil level must be between the upper limit and lower limit shown on the dipstick.
- 7. Return the dipstick.

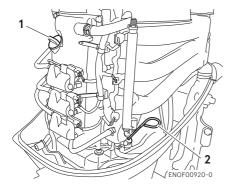

- 1. Filler cap
- 2. Dipstick



- 1. Upper level 2200 mL
- 2. Lower level 1700 mL

ENON00024-0

Note

The oil level should be checked when the engine is cooled.

ENON00025-0

Note

Consult with an authorized dealer if the engine oil is milky color, or appears contaminated.

ENOM00082-A

Engine oil replenishing


ENOW00079-A

⚠ CAUTION

- Do not add engine oil of brand and grade other than existing one. In case engine oil of other brand or grade is added, drain all oil and ask dealer for treatment.
- In case other than engine oil such as gasoline is put in the oil chamber, empty the chamber and ask dealer for treatment.
- When replenishing engine oil, be careful not to allow entry of foreign matters such as dust and water into oil chamber.

- Wipe off engine oil well immediately if spilled and dispose of it in accordance with local fire prevention and environment protection regulations.
- Do not replenish engine oil over upper limit. If overfilled, remove oil to upper limit. If engine oil is over the upper limit, it can leak potentially leading to engine damage.

If the oil level is low, or at lowest mark, add recommended oil to the middle dipstick mark.

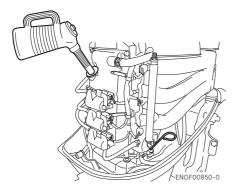

FNOM00083-1

Washing outboard motor

ENOW00920-0

10

⚠ CAUTION

When washing the outboard motor, be careful not to spray the water inside of the top cowl, especially electrical components.

ENON00026-0

Note

It is recommended to check chemical properties of water on which your outboard motor is regularly used.

If outboard motor is used in salt water, brackish water or water with high acidic level, use fresh water to remove salt, chemicals or mud. And flush cooling water passage after every use or before storing outboard motor for long time. Before flushing, remove the propeller and the forward thrust holder.

ENOM00085-E

Flushing hose joint

ENOW00921-0




Do not operate the engine when flushing the outboard motor with a hose joint as this can cause damage to the outboard motor.

ENOW00922-0

↑ CAUTION

To prevent the engine from starting when you are near the propeller, remove the stop switch lock.

- 1. Tilt down the outboard motor.
- 2. Remove the flushing connector cap from the outboard motor, and screw in the hose joint.
- 3. Connect a water hose. Turn on the water and adjust the flow.
 - Continue flushing the outboard motor for 3 to 5 minutes
- 4. After the flushing, be sure to reattach the flushing connector cap.
- 5. Tilt up the outboard motor.

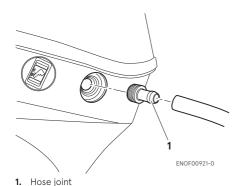

ENOM00085-A

Flushing by test tank

ENOW00081-1

♠ WARNING

Do not start engine without removing propeller, turning propeller out in the open may lead to personal injury.

ENOW00082-0

⚠ WARNING


Never start or operate the engine indoors or in any space which is not well ventilated. Exhaust gas contains carbon monoxide, a colorless and odorless gas which can be fatal if inhaled for any length of time.

ENOW00036-1A

A CAUTION

When starting the outboard motor in the test tank, make sure that:

- Water level is at least 10 cm (4 in.) above the anti-ventilation plate to avoid overheating of the engine.
- 2. Run at idling only
- 3. Remove the propeller (See page 79)

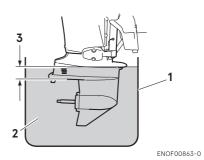

- 1. Test tank
- 2. Water
- 3. Over 10 cm (4 in.)

ENOM01903-A

Gear case flushing device

ENOW00082-0

⚠ WARNING

Never start or operate the engine indoors or in any space which is not well ventilated. Exhaust gas contains carbon monoxide, a colorless and odorless gas which can be fatal if inhaled for any length of time.

FNOW00986-0


A CAUTION

Never leave the outboard motor unattended while running on the flushing devise. When the flushing devise slip off from the gear case, the engine will overheat and may cause serious damage.

- 1. Fully tilt down the outboard motor.
- 2. Remove the propeller.
- Install the gear case flushing device on gear case so that the rubber cups cover the cooling water inlets tightly.

10

4. Connect a water hose to the flushing devise and turn on the water and adjust the flow so that excess water continues leaking out from around the rubber cups to ensure the engine is receiving an adequate supply of cooling water.

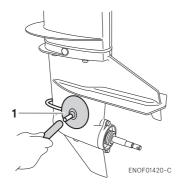

- 1. Gear case flushing device
- 5. Place the shift lever in the neutral position and start the engine and run at idle speed for 3-5 minutes.
- 6. Check if a steady stream of water flows from the cooling water check port.
- 7. Stop the engine and turn off the water. Remove the flushing devise. Install the propeller.
- 8. Leave the outboard motor in vertical position to completely drain the cooling water from the outboard motor.

ENOM00950-0

Fuse replacement

FNOW00923-1



Before replacing a fuse, disconnect the battery cable from the battery negative (-) terminal first. Failure to properly remove battery cables may cause a short-circuit.

ENOW00924-0




Never use a fuse with a rating that exceeds the specified rating as this could cause serious damage to the electrical system.

If the fuse is blown, try to determine the cause and respond to the problem as simply replacing the fuse will likely be blown again. If you are unable to respond to the cause or the fuse continues to blow, request an authorized Tohatsu dealer for inspection.

- Stop the engine and disconnect the battery cable from the battery negative (-) terminal.
- 2. Remove the engine cover.
- 3. Remove the fuse box lid.

4. Remove the fuse and check it. If the fuse is blown, replace it with a fuse of the same specified rating. The outboard motor is supplied with spare fuses in the spare fuse holder.

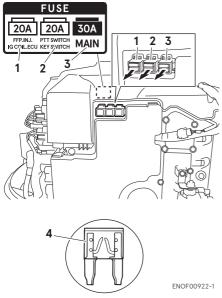

1. Blown fuse

ENOM01106-1

2. Periodic Inspection

It is important to inspect and maintain your outboard motor regularly. Make sure to perform each service at interval specified in the chart below. Maintenance intervals are determined by the number of hours outboard motor has been used or number of months, whichever comes first.

Recode inspection performed in the INSPECTION & MAINTENANCE LOG at the back of this manual.

Description		Inspection intervals					
		First 20 hours or 1 month	Every 50 hours or 3 months	Every 100 hours or 6 months	Every 200 hours or 1 year	Inspection procedure	Remarks
Fuel System	Fuel filter	•	•			Check and clean or Replace if necessary. (See page 77)	
	Fuel filter (Vapor separator)*1				•	Check, clean or replace if necessary	
	Piping/Hoses	•	•			Check and clean or Replace if necessary.	
	Fuel tank	•	•			Clean (See page 76)	
	Fuel tank cap	•	•			Check and clean or Replace if necessary.	
	Fuel pump*1	•	•			Check and clean or Replace if necessary.	
Ignition	Spark plug	•		•		Check gaps. Remove carbon deposits or Replace if necessary. (See page 80)	0.7-0.8 mm (0.028-0.031 in)
•	Ignition timing*1	•		•		Check timing	
Starting System	Starter motor*1			•		Check for salt deposits and the battery cable condition.	
	Battery	•	•			Check installation, fluid quantity, gravity.	
	Engine oil	Replace		Replace •		Replace. (See page 67)	2200 mL (2.3 US qt.)
	Oil filter*1	Replace •			Replace	Replace every 200 hrs or 1 years (See page 75)	Entire cartridge
Engine	Valve Clearance*1	•		•		Check & adjust	*IN: 0.15-0.25 mm (0.006-0.010 in) EX: 0.25-0.35 mm (0.010-0.0135 in)
	Timing belt*1			•		Check and Replace if necessary.	
	Thermostat*1			•		Check and Replace if necessary.	
Lower Unit	Propeller	•	•			Check for bent blades, damage, wear. Replace if necessary. (See page 79)	
	Gear oil	Replace	•	Replace •		Change or replenish-oil and check for water leaks. (See page 77)	500 mL (16.9 fl.oz.)
	Water pump*1		•		Replace •	Check for wear or damage and replace if necessary	Replace impeller every 12 months.

^{*60}A IN 0.20 - 0.25 mm (0.008 - 0.010 in) EX 0.30 - 0.35 mm (0.012 - 0.0135 in)

		Inspectio	n intervals			Remarks	
Description	First 20 hours or 1 month	Every 50 hours or 3 months	Every 100 hours or 6 months	Every 200 hours or 1 year	Inspection procedure		
Power trim & tilt *1	•		•		Check & replenish oil, manually operate		
Warning system*1		•			Check function		
Bolts and Nuts	•	•			Retighten		
Sliding and Rotating Parts. Grease Nipples	•	•			Apply and pump in grease. (See page 84)		
Outer Equipment	•	•			Check for corrosion.		
Anode			•		Check for corrosion and deformation.	Replace if necessary.	

^{*1:} Have this handled by your dealer.

Outboards used in rental, commercial, or other under severe condition as described below in detail require more frequent inspections and maintenance than shown in this manual.

- Continuous operation at maximum engine speed
- Continuous operation at idling or trolling speed
- Operation without appropriate warm up
- Stopping without sufficient time for the engine to cool down
- Frequent sudden acceleration and sudden deceleration
- Frequent stop and start operation
- Frequent shifting operation
- Frequent operation in acidic, polluted, muddy, sandy, or shallow water

Appropriate maintenance can prolong your engine life.

Consult your Tohatsu authorized dealer for suitable maintenance interval depending on operating and environmental conditions.

ENOM00091-C

Engine oil replacement

ENOW00091-1

⚠ CAUTION

You may be injured due to high engine temperatures if you fill engine oil just after operation. Engine oil should be changed after the engine has been cooled.

ENOW00092-1

⚠ CAUTION

- Do not overfill engine oil, or engine oil could leak and/or engine could be damaged. If engine oil level is over upper limit marks of dip stick, drain oil to level lower than upper limit.
- Be sure that outboard motor is upright when checking or changing oil.
- Stop the engine immediately if low oil pressure warning lamp or oil leak is found, or engine could be severely damaged. Consult your dealer.
- Wipe off engine oil well immediately if spilled and dispose of it in accordance with local fire prevention and environment protection regulations.

ENOW00090-0

CAUTION

Use of engine oils that does not meet these requirements will result in reducing engine life, and other engine problems.

ENOW00933-0

⚠ CAUTION

Engine oil mixed with dust or water will dramatically shorten the life of the engine.


ENOM00565-0

To change engine oil:

Be sure to use recommended engine oil.

1. Stop the engine and leave it in a vertical position over 5 minutes.

- 2. Tilt up the outboard motor and lock the tilt with the tilt stopper.
- Turn the steering on the outboard motor so that the oil drain bolt is facing downward.
- 4. Put an oil drain pan under the oil drain bolt.
- 5. Remove the oil drain bolt and completely drain oil from the engine.

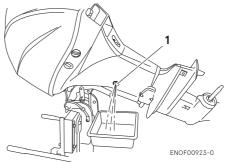

- 1. Drain hole
- Apply oil on the sealing surface of the drain bolt. Tighten the bolt with a new gasket.

Oil drain bolt specified torque

24N·m (17 ft·lb, 2.4 kgf·m)


ENON00028-A

Note


If a torque-wrench is not available when you are fitting a oil filter, a good estimate of the correct torque is 3/4 to 1 a turn past finger-tight. Have the oil filter adjusted to the correct torque as soon as possible with a torque-wrench.

- 7. Tilt down the engine in a vertical position.
- Repeat 2 to 7 procedures two or three times to drain the trapped oil completely.

- 9. Pull the bottom of cowl latch to unlock, lift and remove the top cowl.
- 10. Fill the engine through the filler port with the recommended oil to between the upper and lower limit mark on the dipstick.
- 11. Tighten the oil filler cap.
- Leave the outboard motor for 5 minutes and check oil level on the dipstick. Add oil if necessary
- 13. Insert the dipstick to the hole completely and install the top cowl.
- 14. Start the engine and idling for 5 minuets, then check for no oil leaks and no warning indicate.

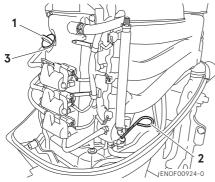

- 1. Filler cap
- 2. Dipstick
- 3. Filler port

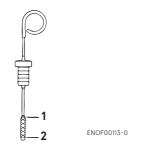

- 1. Upper limit (Max.)
- 2. Lower limit (Min.)

ENON00920-0

Note

Use only recommended engine oil (See page 30).

Oil volume needed for complete oil replacement								
With oil filter replacement	Without oil filter replacement							
Approximately 2.4 L (2.5/2.1 US/Imp. qt)	Approximately 2.2 L (2.3/1.9 US/Imp. qt)							

ENOW00925-0

⚠ CAUTION

Wipe off engine oil well immediately if spilled and dispose of it in accordance with local fire prevention and environment protection regulations.

ENON00031-0

Note

- If any amount of water is found in engine oil, making it milky white, consult dealer
- If engine oil is contaminated with fuel, emitting strong fuel smell, consult dealer
- Some oil dilution is normal if engine is idled or trolled for long periods, especially in cooler water temperatures.

ENOM00092-A

Oil filter replacement

ENOW00091-1

A CAUTION

You may be injured due to high engine temperatures if you fill engine oil just after operation. Engine oil should be changed after the engine has been cooled.

ENOW00926-0



Wipe off engine oil well immediately if spilled and dispose of it in accordance with local

fire prevention and environment protection regulations.

- 1. Drain oil from the engine.
- 2. Place a rag or towel below the oil filter to absorb any spilled oil.
- 3. Unscrew old filter by turning the filter to counter-clockwise.
- Clean the mounting base. Apply film of clean oil to O-ring.

Do not use grease.

Install oil filter and tighten it to specified torque by using oil filter wrench.

Oil filter torque:

18 N·m (13 ft·lb, 1.8 kgf·m)

ENON00028-A


Note

If a torque-wrench is not available when you are fitting a oil filter, a good estimate of the correct torque is 3/4 to 1 a turn past finger-tight. Have the oil filter adjusted to the correct torque as soon as possible with a torque-wrench.



ENOF00094-0

1. Oil filter wrench P/N 3AC-99090-0 P/N 3AC99090M (US. CANADA Only)

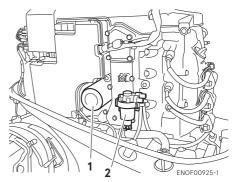

- 1. Oil filter
- 2. Fuel filter

FNOM00093-A

Fuel filters and fuel tank cleaning

ENOW00093-1

⚠ WARNING

Gasoline and its vapor is very flammable and can be explosive.


- Do not start this procedure while engine is operating or while engine is hot.
- Place fuel filter away from every source of ignition such as sparks or open flames.
- If gasoline is spilled, wipe up immediately and dispose according to the local regulations.
- Install fuel filter with all related parts in place, or fuel leak could occur, leading to catching fire or explosion.
- Check fuel system regularly for leakage.
- Contact authorized dealer for fuel system services. Services by unqualified person could lead to engine damage.

Fuel filters are provided inside the fuel tank and engine.

ENOM00094-0

Fuel filter (for engine)

1. Check the cup for water and debris.

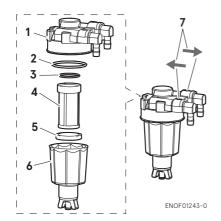

- 1. Body
- 2. O-ring
- 3. O-ring
- 4. Filter
- FloatCup
- 7. Indication of Fuel Flow.
- If present, disconnect hoses from the fuel connector (male) and the fuel pump.
- 3. Remove the cup, filter and O-rings from the fuel filter body.
- 4. Check the wear and clogging for each parts, and replace if necessary.
- 5. Remove fuel and any water or debris from the cup, filter and hoses.
- 6. Reassemble all parts.


FNOM00096-A

Fuel filter (for fuel tank)

Water or dirt in the fuel tank will cause engine performance problems.

Check and clean the tank at specified times or after the outboard motor has been stored for a long period of time (over three months).

- Remove four screws to remove the Fuel Pick-Up.
- 2. Clean the fuel filter and replace the gasket.
- 3. Reassemble all parts.

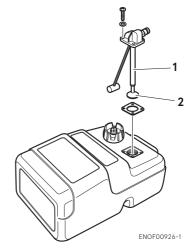

- 1. Fuel pick-up
- 2. Filter

ENOM00098-A


Gear oil replacement

ENOW00076-1

⚠ WARNING

- Be sure that the outboard motor is secured to transom or service stand, or accidental drop or fall of outboard motor could lead to severe personal injury.
- Be sure to lock the outboard motor in the tilt up position, or accidental fall of outboard motor could lead to severe personal injury.
- Do not go under outboard motor in the tilt up position and locked, or accidental fall of outboard motor could lead to severe personal injury.

- 1. Tilt down the outboard motor.
- 2. Remove the oil plugs (lower and upper), and completely drain the gear oil into a pan.

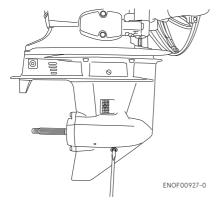


 Insert the oil tube nozzle into the lower oil plug hole, and fill with gear oil by squeezing the oil tube until oil flows out of the upper plug hole and bubbles is disappeared to remove the air.

ENON00033-1

Note

Use genuine gear oil or the ones recommended (API GL-5: SAE #80 to #90). Required volume: approx. 500 mL.

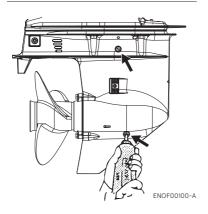

4. Install the upper oil plug, and then remove oil tube nozzle and install the lower oil plug.

Oil plug specified tightening torque

4 N·m (3 ft·lb, 0.4 kgf·m)

ENOW00095-0

⚠ CAUTION

Do not reuse oil plug gasket. Always use new gasket and tighten oil plug properly to prevent entry of water into lower unit.



ENOW00928-1

A CAUTION

If gear oil is spilled, wipe off immediately and dispose according to the local regulations.

ENON00032-1

Note

If the gear oil color appears to be milky color, contact your dealer.

ENOM00086-A

Propeller replacement

ENOW00084-1

⚠ WARNING

- Do not install or remove propeller on the outboard motor with spark plug caps attached, shift in forward or reverse, main switch at other than "OFF", engine stop switch lock attached to the switch, and starter key attached, or engine could accidentally start leading to serious personal injury. Disconnecting battery cable is recommended (if equipped).
- The propeller edge is thin and sharp. Wear the gloves while installing or removing to protect your hands.


ENOW00086-1

⚠ CAUTION


- Do not install propeller without thrust holder, or propeller boss could be damaged.
- Do not reuse split pin.
- After installing split pin, spread bend both end of the pin apart to lock propeller in place.

A worn-out or bent propeller will lower the motor's performance, and cause engine trouble.

 Put a piece of wood block between propeller blade and anti-ventilation plate to hold propeller.

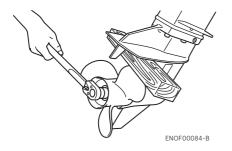

- 2. Remove the split pin, propeller nut and washer.
- 3. Remove the propeller and thrust holder.
- 4. Apply waterproof grease to the propeller shaft before installing a new propeller.
- Install the thrust holder, propeller, stopper, washer and propeller nut onto the shaft.

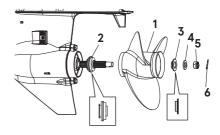

ENOF00084-A

- 1. Propeller
- 2. Thrust holder
- Stopper
- WasherNut
- 6. Split pin
- 6. Tighten the propeller nut to specified torque and align one of grooves with propeller shaft hole.

Propeller nut torque:

35 N·m (25 ft·lb, 3.5kgf·m)

Install a new split pin into the nut hole and bend both ends of pin apart to lock propeller in place.



FNOM00087-0

Spark plugs replacement

ENOW00087-1

⚠ WARNING

- Do not reuse spark plug, if the insulation is damaged or sparks can leak through crack, potentially leading to electric shock, explosion and/or fire.
- Do not touch spark plug(s) immediately after stopping engine as they will be hot and could cause severe burns if touched.

ENOW00929-A

 
A CAUTION

- Use only the recommended spark plugs.
 Spark plugs which have an different heat range may cause engine damage.
- Do not clean electrodes of iridium spark plug. If it is contaminated with carbon deposit or dirt, replace with a new one.
- Do not adjust the plug gasp, if it is out of specification, replace with a new one.

If the spark plug(s) is fouled, has carbon build up, or is worn, it should be replaced.

- 1. Stop the engine.
- 2. Remove the top cowl.
- 3. Remove the spark plug caps.
- Remove the spark plugs by turning it counter-clockwise, using a 5/8" (16 mm) socket wrench and handle that are provided in the tool bag.
- Inspect the spark plug. Replace the spark plug with wear on electrodes and if the insulators are cracked or chipped.

6. Measure the spark plug gap with a wire type feeler gauge. The gap should be 0.7-0.8 mm (0.028-0.031 in). If the gap is out of specification, replace the spark plug with a new one Use spark plug; NGK IKR6G8



- 1. Electrode
- 2. Spark gap (0.7-0.8 mm, 0.028-0.031 in)
- 7. Install the spark plug by hand and turn it carefully to avoid cross-threading.
- 8. Tighten the spark plug to the specified torque.

ENON00028-2A

Note

Spark plug tightening torque: 18 N·m (13 ft·lb) [1.8 kgf·m]

If a torque-wrench is not available when you are installing a new spark plug, tighten it 1/4 to 1/2 a turn past finger-tight. If reusing a spark plug, tighten 1/12 a turn past finger tight. Have the spark plug adjustment to the correct torque as soon as possible with a torque-wrench.

Note

- Do not clean electrodes of the spark plug by a brush, or an iridium tip on the electrodes could be damaged.
- Do not adjust the plug gap, if it is out of specification, replace the spark plug with a new one.

10

ENOM00088-1A


Anode replacement

A sacrificial anode protects the outboard motor from galvanic corrosion. Anode is located on the gear case, cylinder etc.. When the anode is eroded more than 1/3 of original size, replace it.

ENON00029-1

Notes

- Never grease or paint the anode.
- At each inspection, re-tighten all the anode attaching bolts. Those bolts may loosen if the anodes are corroded.

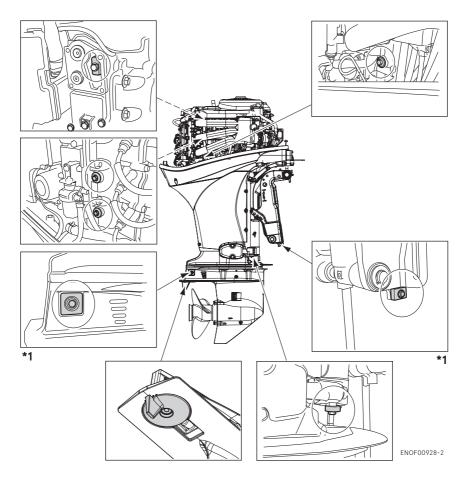



ENOM01827-0

Ground wire checking

The ground wires described below are making electrically connection between moving parts and sacrificial anodes to prevent galvanic corrosion.

Inspect the wires and their terminals periodically. If there is any damage, replace the ground wire.

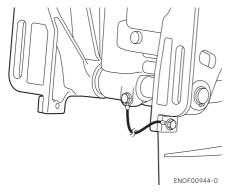

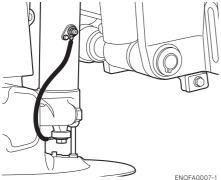

ENOM00089-A

Power Trim & Tilt oil checking

ENOW00088-0

⚠ WARNING

 Be sure that outboard motor is secured to transom or service stand, or accidental drop or fall of outboard motor could lead to severe personal injury.

- Be sure to lock outboard motor if it is tilted up, or accidental fall of outboard motor could lead to severe personal injury.
- Do not go under outboard motor tilted up and locked, or accidental fall of outboard motor could lead to severe personal injury.


ENOW00089-0

CAUTION

Do not unscrew the oil plug with the outboard motor tilted down. Pressurized oil in the oil tank may spurt out.

Check the oil level in the reservoir tank while the tank is kept in a vertical position.

- 1. Tilt the outboard motor up and lock the tilt with the tilt stopper.
- Remove the oil cap by turning counter-clockwise, then check if the oil level reaches the bottom line of the plug hole.

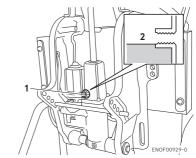

- 1. Oil cap
- 2. Oil level

Recommended oil

Use automatic transmission fluid or equivalent.


Recommended oil is are as shown below.

ATF Dexron III

Air purging from the Power Trim and Tilt unit.

Trapped air in the Power Trim & Tilt unit will cause poor tilting movement and noise.

- With the outboard motor installed on the boat, set the manual release valve to the Manual side, and tilt the outboard motor up/down manually 5-6 times.
- 2. When done, close the valve by turning it clockwise.

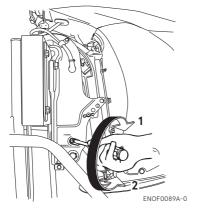

- 1. POWER
- 2. MANUAL


Manual relief valve specified torque:

1.8 N·m (1.4 ft·lb, 0.18 kgf·m)

ENOM00960-0

Grease point

Apply waterproof grease to the parts shown below.

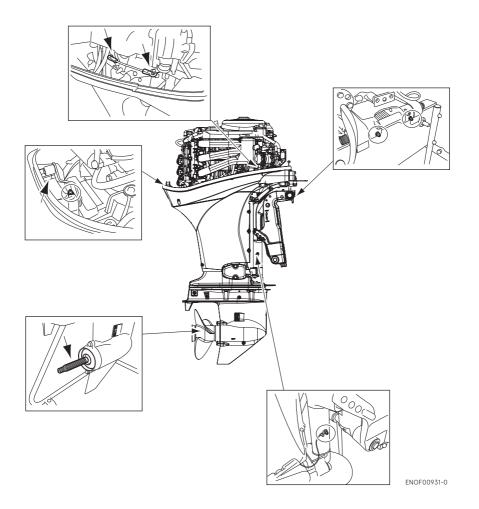

ENOM00100-A

3. Off-season storage

ENOW00934-1

⚠ WARNING

- Be sure to disconnect the fuel hose from a fuel tank except when operating engine.
- Fuel leakage is a fire or explosion hazard, which can cause serious injury or death.

ENOW00097-0

⚠ WARNING

Be sure to use cloth to remove fuel remaining in the cowl and dispose of it in accordance with local fire prevention and environment protection regulations.

ENOW00096-0

A CAUTION

Before servicing the motor for storage:

- Remove the battery cables.
- Remove the spark plug caps from the spark plugs.
- Do not run the motor out of the water.

Before you put your outboard motor in storage, it is a good opportunity to have it serviced by your dealer.

Be sure to use fuel stabilizer while running the motor before storage. (See page 86)

ENOM00101-A

Engine

 Wash the engine exterior and flush the cooling water system thoroughly with fresh water. Drain the water completely.

Wipe off any surface water with an oily rag.


- Use a dry cloth to completely wipe off water and salt from the electrical components.
- Drain all fuel from the fuel hoses, fuel pump, fuel filter (See page 77) and vapor separator (See page 87), and clean these parts.
 - Keep in mind that if gasoline is kept in the vapor separator for a long time, gum and varnish will develop, causing the float valve to stick, restricting the fuel flow.
- Remove the spark plugs and put a teaspoon of engine oil or spray storage oil into the combustion chamber through the spark plug holes.
- 5. Turn the starter motor several turns to lubricate inside the cylinder.

ENOW00930-1

⚠ WARNING

- Be sure to remove stop switch lock to prevent the spark plug(s) from igniting.
- Put a cloth to spark plug hole and wipe up any spilled engine oil, when cranking the outboard motor.
- 6. Change the engine oil (See page 74).
- 7. Change the gear oil in the gear case (See page 77).
- 8. Apply grease to grease point (See page 84).

9. Place the outboard motor in the vertical position under a dry condition.

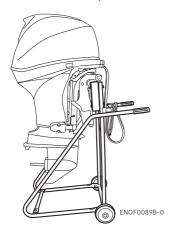


FNOW00066-1

⚠ CAUTION

- Do not give a shock to an outboard motor during transportation.
- Do not carry or store outboard motor in any of positions described below.

Otherwise, engine's exterior may be damaged or water may enter the cylinder through the exhaust port and cause engine problems.

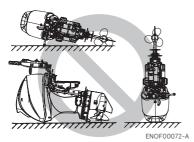


ENON00021-3

Note

If the outboard motor must be laid down, be sure that fuel is completely drained,

 then lay the outboard motor with port side down on the cushion as shown in the drawing.



ENOF00072-B

FNOM00950-0

Adding a fuel stabilizer

When adding a fuel stabilizer additive (commercially available), first fill the fuel tank with fresh fuel. If the fuel tank is only partially filled, air in the tank can cause the fuel to deteriorate during storage.

- Before adding fuel stabilizer additive, drain the vapor separator (See page 87).
- Follow the instructions on the label when adding the fuel stabilizer additive.
- 3. After adding the additive, let the outboard motor run in the water for 10 minutes to make sure any old fuel in the fuel system has been completely replaced by the fuel with additive.
- 4. Turn the engine OFF

ENON00891-1

Note

If your motor is used occasionally, it is recommended to use a high quality fuel stabilizer for the fuel and keep the fuel tank full to reduce condensation and evaporation. ENOM00970-0

Fuel system draining

ENOW00028-A

⚠ WARNING

For details on handling fuel, contact an authorized dealer.

Fuel and fuel vapors are extremely flammable and can be explosive.


- If fuel is spilled, wipe it up immediately.
- Keep the fuel tank well away from sources of ignition, e.g. sparks or open flames
- Perform all work outdoors or in a well ventilated place.

ENOW00097-0

Be sure to use cloth to remove fuel remaining in the cowl and dispose of it in accordance with local fire prevention and environment protection regulations.

- Disconnect the fuel hose from the outboard motor.
- 2. Remove the top cowl.
- Release the drain tube from the clamp and pull the tube outside the bottom cowl. Place an approved fuel container under the drain tube end and use a funnel to avoid spilling fuel.
- 4. Loosen the vapor separator drain screw
- 5. Tilt up the outboard motor until fuel flows out of the drain tube.
- Leave the outboard motor in this position until all fuel has been drained
- 7. When thoroughly drained, retighten the drain screw securely.

8. Check the drained fuel for the presence of water or other contaminants. If either is present, refill the vapor separator with fuel, and then drain the fuel again. Repeat this procedure until no water or other contaminants are present in the drained fuel.

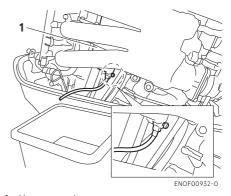

1. Vapor separator

Battery

ENOW00931-A

⚠ WARNING

- Place the battery away from any source of fire, sparks and open flames such as burners or welding equipment.
- Place the battery away from fuel tank. Accidental sparks of battery may cause explosion of fuel.
- Disconnect the battery cables and be sure to remove the negative terminal first.
- 2. Wipe off any chemical deposits, dirt, or grease.
- 3. Apply grease to the battery terminals.
- 4. Charge the battery completely before storing it for the winter.

- Recharge the battery once a month to prevent it from discharging and the electrolyte from deteriorating.
- 6. Store the battery in a dry place.

ENOM00104-A

4. Pre-season check

The following steps must be taken when first using the engine after off-season storage.

- Check that the shift and throttle function properly. (Be sure to turn the propeller shaft when checking the shift function or else the shift linkage may be damaged.)
- 2. Check the electrolyte level, and measure the voltage and specific gravity of the battery.

Specific Grav- ity at 20°C	Terminal Voltage (V)	Charge Condition
1.120	10.5	Fully discharged
1.160	11.1	1/4 charged
1.210	11.7	1/2 charged
1.250	12	3/4 charged
1.280	13.2	Fully charged

- Check that the battery is secure and the battery cables are properly installed.
- 4. Change the engine oil (See page 74).
- Before starting the engine, disconnect stop switch lock and crank approximately 3times of 3sec. turning the starter motor in order to prime the oil pump.
- 6. Fill fuel tank completely.

- Start the engine and warm up the engine for 3 minutes in the "NEU-TRAL" position.
- 8. Run the engine for 5 minutes at the slowest speed.
- Run the engine for 10 minutes at half throttle. The oil used for storage inside the engine will be circulated out to assure optimum performance.

ENOM00105-A

5. Submerged outboard motor

ENOW00098-0

⚠ CAUTION

Do not attempt to start submerged outboard motor immediately after it is recovered, or engine could be severely damaged.

After taking your outboard motor out of the water, immediately take it to your dealer

The following are the emergency measures to be taken for a submerged outboard motor.

- 1. Wash the outboard motor with fresh water to remove salt or dirt.
- Remove the engine oil drain screw and completely drain water and oil from the engine.
- Remove the spark plugs, and completely drain the water from the engine by pulling emergency starter rope (See page 43) several times.
 Replace oil filter and oil to the correct level.

The oil and filter may need to be changed again after running a short period to get all moisture completely out of the crankcase.

 Inject a sufficient amount of engine oil through the spark plug holes.
 Pull the emergency starter rope several times to circulate the oil throughout the outboard motor.



6. Cold weather precautions

If you moor your boat in cold weather at temperatures below 0°C (32°F), water residue in water pump may freeze and may damage the pump, impeller, etc. To avoid, submerge the lower half of the outboard motor into the water.

ENOM00107-A

7. Striking underwater object


ENOW00935-0

⚠ CAUTION

Striking the sea bottom or an underwater object may severely damage the outboard motor.

Follow the procedure below and consult a dealer as soon as possible.

- 1. Stop the engine immediately.
- 2. Check the control system, gear case, boat transom etc.
- 3. Return to the nearest harbor slowly and carefully.
- 4. Consult a dealer check the outboard motor before operation again.

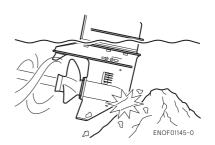

FNOM00121-0

8. Operation with multiple outboard motors

When operating the outboard motors in reverse at more than the lowest speed, be sure that all engines are running.

If any engine has stopped, be sure to tilt the outboard motor up and keep its propeller out of the water.

Otherwise, water could enter the engine and cause damage to it.

■ TROUBLESHOOTING

ENOM00109-0

If you encounter a problem, check the list below to determine the cause and to take the proper action.

An authorized dealer will always be happy to provide any assistance and information.

							1		1			
	Difficult to start engine	Engine runs erratically	Low engine speed/ Poor boat speed	Battery will not hold charge	Starter motor will not crank	Power T & T inoperative	Warning lamp A "ON"	Warning lamp B "Flash"	Warning lamp C "Flash"	Three warning lamps "Flash"	Warning buzzer "ON"	Possible cause
	•											Empty fuel tank
	•	•	•									Incorrect connection of fuel system
	•	•	•									Air entering fuel line
Σ	•	•	•									Deformed or damaged fuel hose
FUEL SYSTEM	•	•	•									Closed air vent on fuel tank
EL S	•	•	•									Clogged fuel filter or fuel pump
₽	•	•	•									Fuel pump mulfunction
			•				•					Use of improper engine oil
	•	•	•									Use of improper gasoline
	•											Not enough fuel supply by primer
	•	•	•	•	•	•	•	•	•	•		Electrical components out of range or improper or loose wiring connection.
		•	•									Spark plug other than specified
	•	•	•									Dirt, soot, etc. on spark plug
	•	•	•									No Spark or weak spark
Σ	•											Short circuit of engine stop switch
YST	•											Lack of stop switch lock plate
AL S				•					•			Rectifier failure
R C	•				•	•						Blown 30 Amp fuse in the starting circuit
ELECTRICAL SYSTEM	•				•							Not shifted into neutral position
日日	•			•	•	•			•			Weak battery or battery connections are loose or corroded
	•				•	•						Ignition key switch failure
	•				•							Starter motor or starter solenoid failure
						•						Power trim & tilt switch defective, Solenoid is defective

	Difficult to start engine	Engine runs erratically	Low engine speed/ Poor boat speed	Battery will not hold charge	Starter motor will not crank	Power T & T inoperative	Warning lamp A "ON"	Warning lamp B "Flash"	Warning lamp C "Flash"	Three warning lamps "Flash"	Warning buzzer "ON"	Possible cause	
	•	•	•									Low compression	
∞ Z =		•	•									Carbon deposits in the combustion chamber	
STE		•	•									Incorrect valve clearance	
COMPRESSION & OIL SYSTEM			•				•				•	Low oil pressure/level, oil pump failure, Clogged oil filter (Pressure switch ON)	
8		•	•					•				Insufficient cooling water flow, clogged or defective pump	
		•	•					•				Faulty thermostat	
		•	•					•			•	Cavitations or ventilation	
		•	•								•	Incorrect propeller selection	
S.		•	•								•	Damaged or bent propeller	
OTHERS			•									Improper thrust rod position	
O			•									Unbalanced load on boat	
		•	•								•	Transom too high or too low	
						•						A great deal of air is contained inside pump	
			•									Insufficient throttle aperture	

■ ACCESSORIES KIT

ENOM00109-1

The followings are a list of the tools and spare parts provided with the motor.

	Items	Quantity	Remark
	Tool bag	1	
	Pliers	1	
	Socket wrench	1	10 × 13 mm
Service tools	Socket wrench	1	16 mm (spark plug)
	Socket wrench handle	1	
	Screwdrivers	1	Double head (Cross/Flat)
	Screwdriver handle	1	
	Emergency starter rope	1	
Spare parts	Split pin	1	
	Stop switch lock	1	
	Fuel tank	1	25 L
	Primer bulb	1 set	For international models
	Band	1	
	Rigging bolt set		
	Bolt	2	M12P1.25 x 105 mm
	Washer	4	13-34-3
Parts Packaged	Washer	4	M12
with Engine	Nylon locking nut	4	M12P1.25
	Remote Control Fitting Assy	1	
	Cable joint set		
	Cable joint	2	
	Washer	2	8.5-18-1.6
	Snap pin	2	
	Hose joint	1	For Flushing

PROPELLER TABLE

ENOM00111-0

- Propeller selection is important to optimize outboard motor performance. The type and size of propellers have a direct impact on acceleration, cruising performance such as fuel efficiency, and engine life.
- A propeller must be selected so that the engine RPM measured at wide open throttle while cruising is within the recommended range.
- In general, a large pitch propeller is suitable for smaller operating load, and small
 pitch propeller is suitable for larger operating load. If the boat load varies significantly, select a propeller that operates within the proper range for the maximum
 load. However, please note that it is necessary to have rpm setting within the recommended engine speed range for the lighter boat load.
- Consult your dealer for selecting optional propeller.

Load	Propeller Mark	Number of Blades		ler Size r × Pitch)	Standard Propeller			
	Mark	Diages	inch	mm	MFS 40A	MFS 50A	MFS60A	
Light	11 × 17	3	11 × 17	280 × 432				
	11 × 16	3	11 × 16	279 × 406				
	11 × 15	3	11 × 15	278 × 381				
	11.1 × 14	3	11 × 14	279 × 356		S, L	L	
	11.1 × 13	3	10.9 × 13	277 × 330	S, L			
	11.4 × 12	3	11.1 × 12	283 × 305				
	11.6 × 11	3	11.4 × 11	290 × 379				
	12.1 × 9	3	12.2 × 9	311 × 229				
Heavy	H7	4	11.4 × 7.1	290 × 180				


*Related to equipped propeller

In certain models, the standard propeller is already equipped on your outboard motor. Except for propeller came with outboard motor, propellers listed above are optional. Please consult your dealer to select the best propeller for your boat if the standard propeller does not match.

Full Throttle Operating Range MFS 40-60A: 5000 - 6000 min⁻¹ (rpm)

Propeller Mark Location

1: H7 2: Others

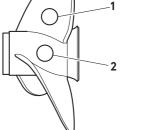

INSPECTION & MAINTENANCE LOG

Date	Engine Hour	Inspection/Maintenance Performed	Performed by

OWNER'S MANUAL

